



**DataTale SMART**  
**2-Bay Thunderbolt™**  
**RAID System**



***User's Manual***

Please go to Data Watch Tech's website at <http://www.data-tale.com> or <http://www.datawatchtech.com> for the latest User's Manual version and additional information.



# TABLE OF CONTENTS


<b>GENERAL INFORMATION.....</b>	<b>4</b>
COPYRIGHT .....	4
NOTICES AND CLASSIFICATIONS .....	4
CONTACT US .....	4
<b>PRECAUTIONS FOR THE RAID SYSTEM.....</b>	<b>5</b>
GENERAL PRECAUTIONS.....	5
RAID SYSTEM PRECAUTIONS .....	5
<b>INTRODUCTION .....</b>	<b>6</b>
FEATURES.....	6
SYSTEM REQUIREMENT .....	7
MAC.....	7
WINDOWS.....	7
OPTIONAL ACCESSORIES .....	7
PACKAGE CONTENTS.....	8
<b>SYSTEM VIEWS .....</b>	<b>9</b>
FRONT VIEW.....	9
REAR VIEW .....	9
TOP & COVER VIEW (EXPOSED).....	10
<b>INSERTING/REPLACING THE HARD DRIVES IN THE RAID SYSTEM .....</b>	<b>11</b>
FASTEN THE HDD SMARTGUIDER KIT ONTO THE HARD DRIVE .....	12
PLACE THE HDD SMARTGUIDER KIT INSIDE THE RAID SYSTEM .....	15
<b>CONNECTING THE RAID SYSTEM TO A HOST COMPUTER.....</b>	<b>17</b>
<b>NUMBER OF HARD DRIVE/SSD SUPPORTING EACH RAID MODE.....</b>	<b>19</b>
<b>DISK SLOT NUMBER.....</b>	<b>19</b>
<b>LED INDICATORS .....</b>	<b>20</b>
ALL DISKS: INSERTED / DETECTED.....	20
ALL DISKS: NOT INSERTED / DETECTED.....	20
ALL DISKS: DISK 2 DATA ACCESS ONLY .....	20
ALL DISKS: DISK 2 ERROR ONLY .....	21
FAN: ERROR .....	21
<b>SAFE REMOVAL OF THE RAID SYSTEM.....</b>	<b>22</b>
<b>SSD SMARTGUIDER KIT .....</b>	<b>23</b>
SSD SMARTGUIDER KIT: PACKAGE.....	23
SSD SMARTGUIDER KIT: SSD COMPATIBILITY .....	24
SSD SMARTGUIDER KIT: INSTALLATION.....	25
<b>RAID MASTER FOR MAC.....</b>	<b>27</b>
<b>RAID MASTER: INSTALLATION.....</b>	<b>27</b>
INSTALLATION FOR MAC.....	27
UNINSTALLATION FOR MAC .....	32
<b>RAID MASTER: GUI.....</b>	<b>33</b>
INFORMATION: .....	33
CONFIGURATIONS: .....	33

<i>SETTINGS:</i> .....	33
<i>NOTIFICATIONS:</i> .....	33
<i>LOGS:</i> .....	33
<i>FIRMWARE:</i> .....	33
<b>RAID MASTER: FEATURES .....</b>	<b>34</b>
INFORMATION .....	34
<i>DEVICE INFORMATION:</i> .....	34
<i>RAID &amp; DISK INFORMATION:</i> .....	34
<i>DISK INFORMATION:</i> .....	35
RAID CONFIGURATIONS: .....	36
SETTINGS: .....	36
NOTIFICATIONS: .....	37
EVENT LOG: .....	37
FIRMWARE INFORMATION .....	38
<b>RAID MASTER: OPERATION .....</b>	<b>39</b>
RAID CONFIGURATIONS: SET UP A NEW RAID SET .....	39
RAID CONFIGURATIONS: DELETE AN EXISTING RAID SET .....	41
RAID CONFIGURATIONS: REBUILD A RAID SET .....	43
<b>WINDOWS OS: PLUG AND PLAY DRIVER.....</b>	<b>46</b>
<b>PLUG AND PLAY DRIVER: INSTALLATION .....</b>	<b>46</b>
<b>MARVELL STORAGE UTILITY (MSU) FOR WINDOWS .....</b>	<b>49</b>
<b>MSU INSTALLATION.....</b>	<b>49</b>
<b>GLOSSORY .....</b>	<b>50</b>
LED INDICATORS.....	50
<i>POWER LED x 1</i> .....	50
<i>DISK LED x 4</i> .....	50
RAID MASTER .....	51
<i>POPUP WINDOWS</i> .....	51
REBUILD .....	53
RAID MODES .....	53
<i>JBOD (None RAID)</i> .....	53
<i>RAID 0 (Striping)</i> .....	54
<i>RAID 1 (Mirroring)</i> .....	54
<i>HYPERDUO (Capacity and Safe)</i> .....	55
<b>APPENDIX: SPECIFICATIONS .....</b>	<b>56</b>

## **GENERAL INFORMATION**

### **Copyright**

V3 Copyright © 2013 Data Watch Technologies Co., Ltd. All rights reserved. DataTale and DataTale logo are the trademarks of Data Watch Technologies Co., Ltd. No part of DataTale brand products and materials may be reproduced, stored in a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), without the prior written consent of Data Watch Technologies Co., Ltd. Thunderbolt™ and the Thunderbolt™ logo are trademarks of Intel Corporation in the United States and other countries.

 The product information provided in this user's manual is subject to change without prior notice and does not represent a commitment on behalf of the vendor. The vendor assumes no liability or responsibility for any errors that may appear in this manual. Firmware, software, images, and descriptions may vary slightly from actual products.


### **Notices And Classifications**

#### ***FCC-B Radio Frequency Interference Statement***

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

### **Contact Us**

We are committed to offer economical, high-quality connectivity and storage enclosure solutions to the market. Any questions, inquiries or comments are highly welcomed. For the latest version of the User Manual & Technical Support, please go to our website at [www.datawatchtech.com](http://www.datawatchtech.com). To enhance excellent quality service, please complete the Product Registration on our website.

#### **Data Watch Technologies Co., Ltd.**

5F, No. 1, Lane 3, Jihu Road, Neihu, Taipei 114, Taiwan

Tel: +886-2-8797-8868 Fax: +886-2-8797-4801

Email: [info@datawatchtech.com](mailto:info@datawatchtech.com)

# **PRECAUTIONS FOR THE RAID SYSTEM**

## **General Precautions**


- The main circuit board of the RAID System is susceptible to static electricity. Proper grounding is required to prevent electrical damage to the RAID System or other connected devices, including the host computer. **Always** place the RAID System on a smooth surface and avoid all dramatic movement, vibration and percussion.
- Do **NOT** place the RAID System close to magnetic devices (such as a mobile phone), high-voltage devices (such as a hair dryer), or near a heat source (such as on the dashboard of a car or any place where it will be exposed to direct sunlight).
- **Use only** the power supply cable provided with the RAID System.
- Do **NOT** attempt to service this RAID System yourself. Please contact Technical Support in regards to any parts other than the ones already mentioned in the Installation Section of this User's Manual.
- Do **NOT** block the ventilation. Proper airflow is required to ensure reliable operation and to prevent overheating.
- Do **NOT** allow water to enter the RAID System.
- Do **unplug** the RAID System from the electrical outlet when not in use to provide an ecological friendly environment.

## **RAID System Precautions**

- Installation of RAID MASTER software in the host computer is required for proper operation.
- Installation of additional equipment in the host computer may be required. Visit our website at [www.datawatchtech.com](http://www.datawatchtech.com) to download the latest product information updates.
- **Any loss, corruption, or destruction of data is the sole responsibility of the user of the RAID System. Under no circumstances will the manufacturer be held liable for the recovery or restoration of any data.**


# **INTRODUCTION**


Thank you for purchasing the DataTale SMART 2-Bay Thunderbolt™ RAID System. The RAID System with Thunderbolt™ connection and RAID MASTER (Graphic User Interface) provides up to 10Gbps of access/transfer speeds along with substantial storage capacity and distinctive RAID configuration options in a desktop storage device. The RAID MASTER allows easy configuration of RAID Modes: JBOD (None RAID), RAID 0 (Striping), RAID 1 (Mirroring), and HyperDuo (Capacity/Safe).

 Please thoroughly read and follow the instructions provided in this manual. Failure to do so may result in damage to the RAID System, and any or all of the connected devices.

## **Features**

- ❖ Compatible with SATA hard drives and solid-state drives, up to 6 Gbps
- ❖ Connects via two (2) Thunderbolt™ ports (up to 10Gbps of transfer rates)
- ❖ Provides multiple RAID tasks for effective storage management: JBOD (None RAID), RAID 0 (Striping), RAID 1 (Mirroring), and HyperDuo (Capacity/Safe)
- ❖ Compatible with Disk Utility (Apple) and configurable as a “Fusion Drive”
- ❖ Supports Rebuild under RAID 1
- ❖ Compatible with Time Machine (Apple) for backups & file protection
- ❖ Provides multiple devices with increased speed and flexibility via Daisy Chain (Up to six Thunderbolt™-compatible devices/displays)
- ❖ Configures RAID modes easily using RAID MASTER (GUI)
- ❖ Monitors System status via LED indicators or RAID MASTER (GUI)
- ❖ Features effortless yet trayless hard drive/SSD hot swap or hot plug via SmartGuider\*
- ❖ Dissipates heat efficiently with aluminum housing
- ❖ Maximizes airflow with a silent fan, SmartGuider\* design, and well-matched mechanical design

 Latest support and trouble-shooting information, including RAID MASTER's newest versions, can be found on our website.

 SmartGuider is a trayless device that utilizes the simplicity of a handle and screws. The integrated handle is attached onto the hard drive (or SSD inside a SSD Bracket) with auto-limiting segmented screws. Then, the entire HDD/SSD SmartGuider Kit can be slide into the RAID System by aligning the screws with its specially designed guides. This enables flexibility for easy hard drive/SSD removal and insertion.

## System Requirement

To use the RAID System, the minimum system configuration in the host computer requires the following:

### MAC

- 🔧 Macintosh/Intel i5 or faster processor
- 🔧 1G of RAM or higher
- 🔧 Mac OS X 10.7 or higher
- 🔧 One available Thunderbolt™ port

### WINDOWS

- 🔧 Intel i3 or faster processor
- 🔧 1G of RAM or higher
- 🔧 Windows 7 or higher
- 🔧 Chrome 18, FireFox 11, Safari 5.1, Opera 11.61, IE 8 or higher
- 🔧 One available Thunderbolt™ port

📋 In order for a Thunderbolt device to operate correctly on a Windows OS via Windows 7 or higher, please first install the Plug and Play Driver onto the host computer. Please go to the “Windows OS:...” section for more details, and the Plug and Play Driver can be downloaded from the Support page on our websites.


📋 3.5/2.5-inch SATA-compatible hard drive and/or 2.5-inch SSD are required for the RAID System. Once the hard drive and/or SSD are formatted, the actual available storage capacity can vary depending on the selected operating environment (normally 5-10 % less).

## Optional Accessories


- 🔧 SSD SmartGuider Kit (Retail package sold separately)
- 🔧 Thunderbolt™ Cable (check your dealer to see if it is included in the package or sold separately)

📋 Due to restrictions of each individual SSD's controller and user's host system, not all the SSDs are compatible when utilized with the RAID System. Please see SSD SmartGuider Kit Section for more information.


## Package Contents

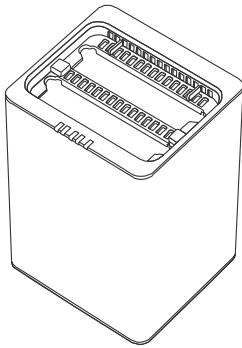


2-Bay RAID System

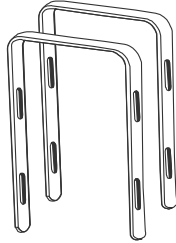


2 Handles

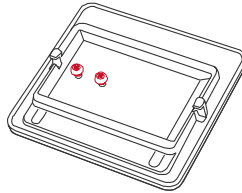

2 spare HDD screws  
(Provided on back of lid cover)

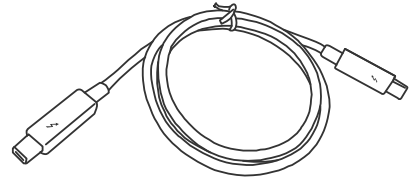

Thunderbolt Cable

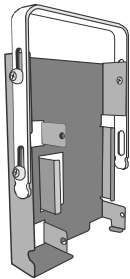


1 SSD SmartGuider Kit



8 HDD Screws  
4 SSD Screws  
(Includes 1 Spare  
SSD Screw)



Quick Start Guide

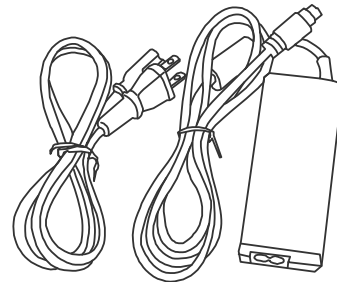

External Power Supply

📋 Please keep all package contents and packaging material in the event that the product must be returned.


📋 Please go to our websites for the most updated information and resources, including RAID MASTER and User's Manual. <http://www.data-tale.com>; <http://www.datawatchtech.com>




# **SYSTEM VIEWS**

## **Front View**




 The status indication of each LED indicator is listed under the LED INDICATORS section.


## **Rear View**

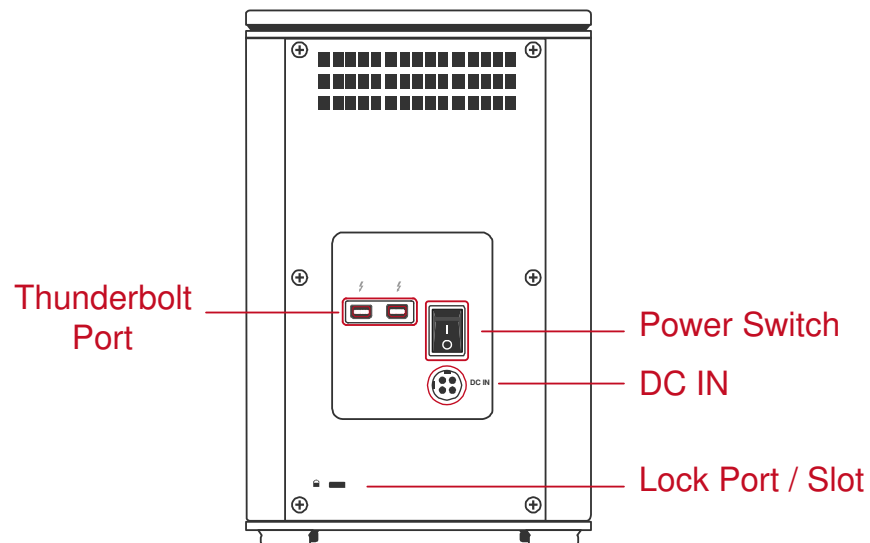

## Top & Cover View (Exposed)

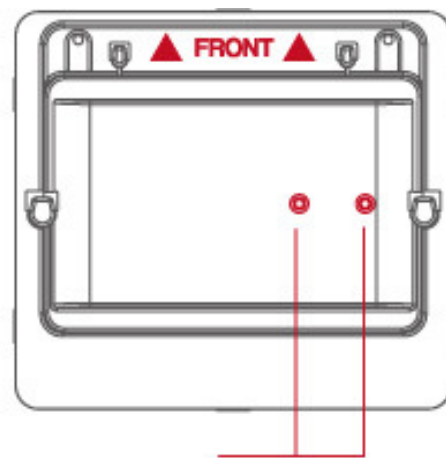

2 Spare HDD Screws

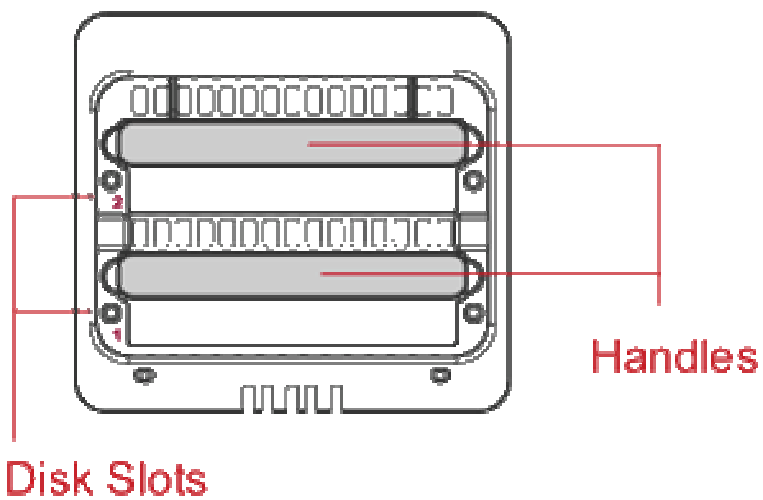


Disk Slots

Handles

## **INSERTING/REPLACING THE HARD DRIVES IN THE RAID SYSTEM**


To assemble the RAID System, please follow the steps listed in the instructions below:

1. Place the RAID System with its Front View facing you. Position both hands on the top lid, one in the front and one in the back. Simultaneously, push the lid in the direction away from you, front to back, using your thumbs.

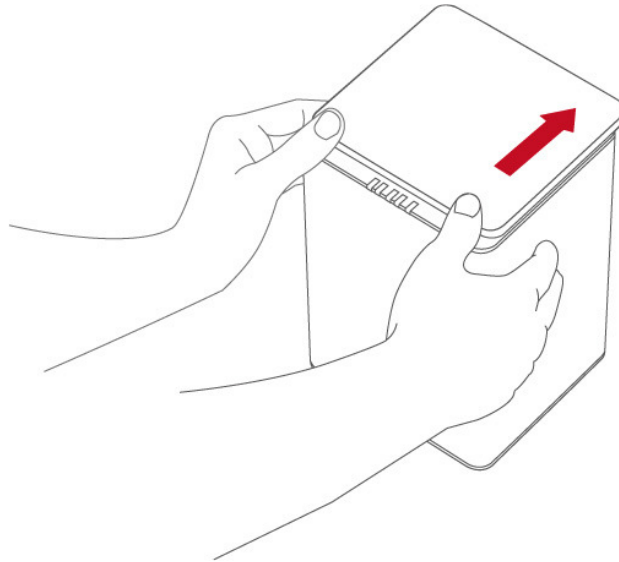


📋 A “click” sound would indicate release of the top lid’s security clasp.

2. Lift the top lid up to remove and expose the Top View (or Disk Slots). Remove the Handles from the RAID System itself and locate the HDD Screws in the packaging box.

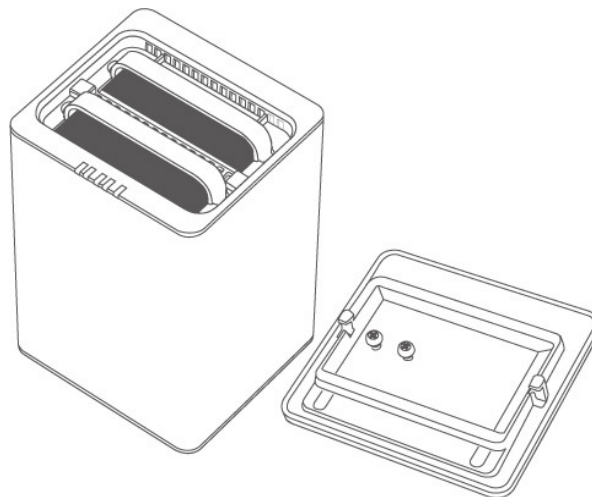


## Fasten The HDD SmartGuider Kit Onto The Hard Drive


3. Place the hard drive with the metal cover side facing up and ensure that the interface connectors are oriented toward your left side.

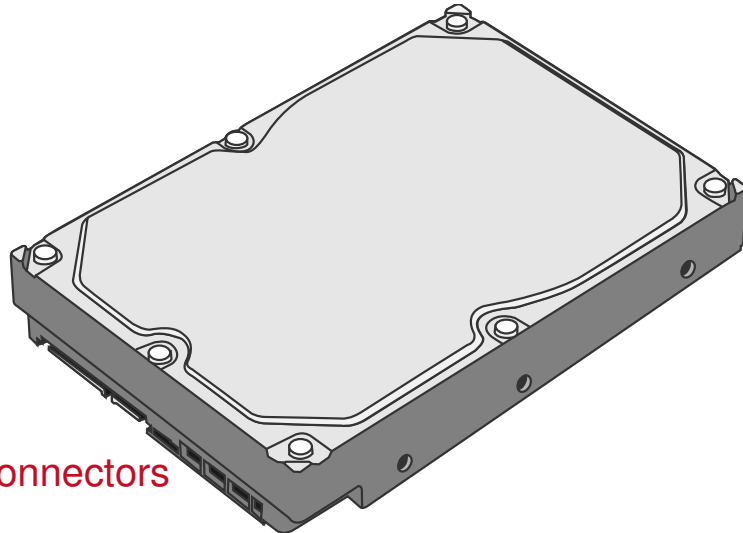


4. Position the Handle to the hard drive end, which is facing away from the interface connectors, and align it with the HDD Screw hole openings.

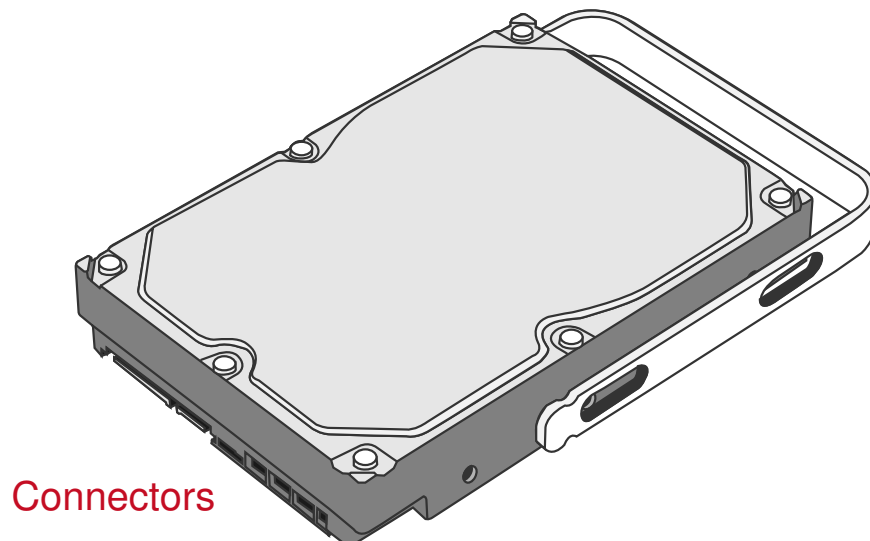


5. Fasten the Handle onto the hard drive by inserting and tightening the HDD Screws, the left one first, then the right one.

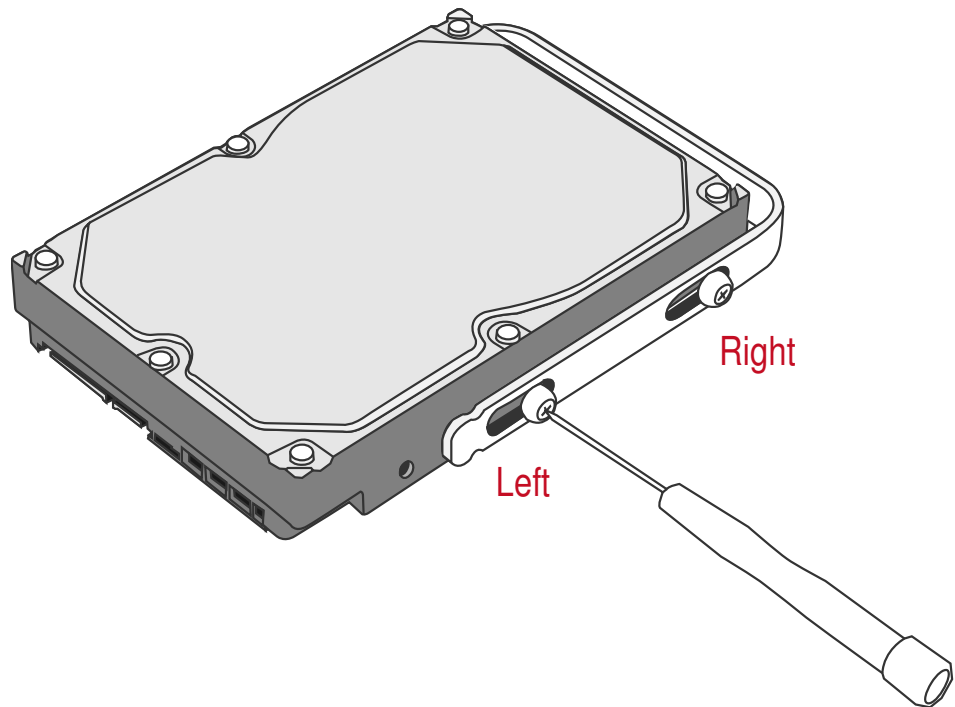


6. Now, flip the hard drive so it is facing you with the PCBA (Printed Circuit Board) on top and the unfasten Handle side facing you.

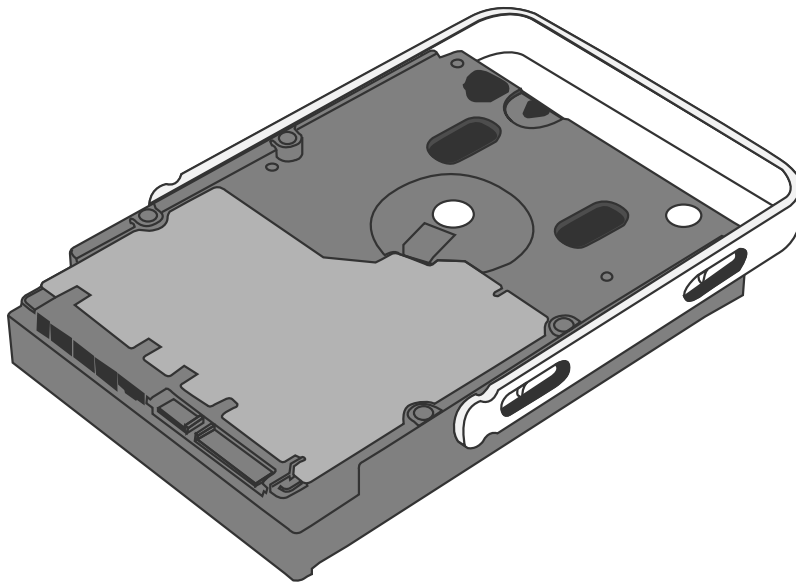

7. Insert and tighten the HDD Screws, the left one first, then the right one.

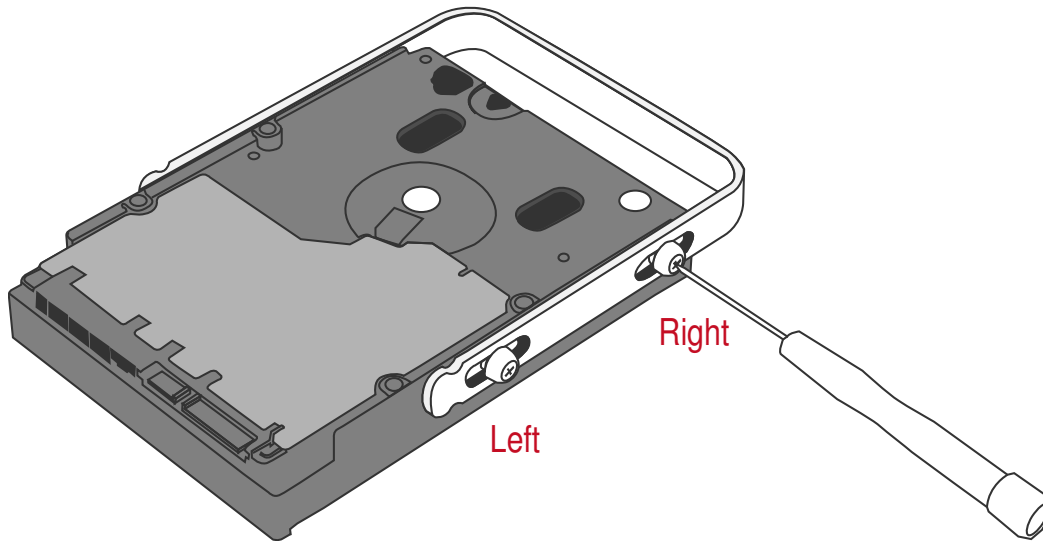


8. Finally, test sliding the Handle to make sure that the holes glide smoothly on the HDD Screw guides and the HDD SmartGuider Kit is completed! Repeat the same procedures for rest of the hard drive(s) if necessary.

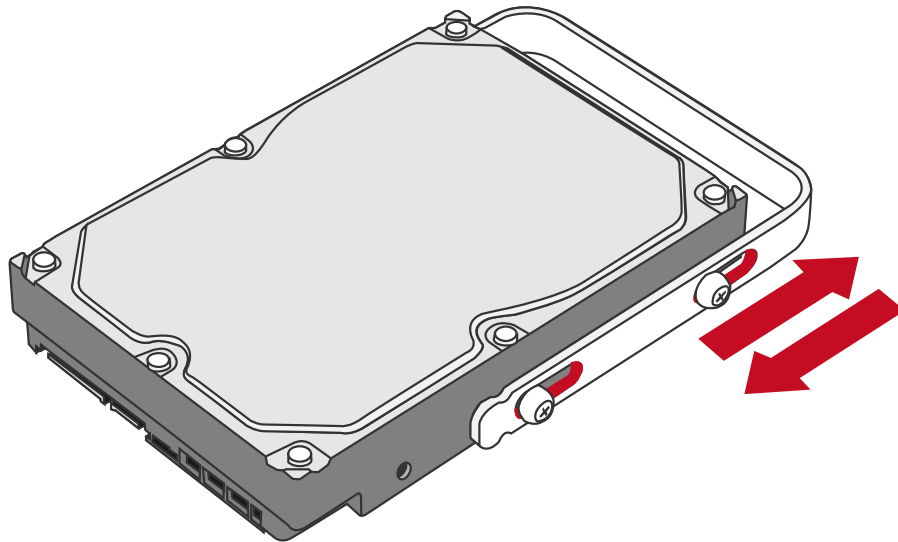

📋 The auto-limiting segmented screws are designed to prevent the hard drives or/and the handles from damages due to over-tightening. Furthermore, this design makes the handle slide easily without any tightness.


## Place The HDD SmartGuider Kit Inside The RAID System

9. Hold the HDD SmartGuider Kit with its metal cover side facing you and the Handle attached in the upward position.

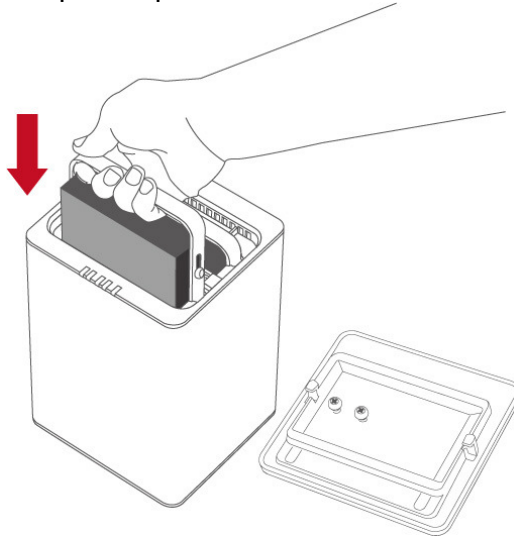


📌 If the HDD SmartGuider Kit is inserted on its reverse side, the SmartGuider System would not be able to align and the HDD SmartGuider Kit cannot be inserted.

10. Align the Handle with the guide rails and slide the HDD SmartGuider Kit into the indicated Disk Slot. Firmly push downward until a “thump” sound is heard. Repeat the same procedures for rest of the HDD SmartGuider Kit(s).

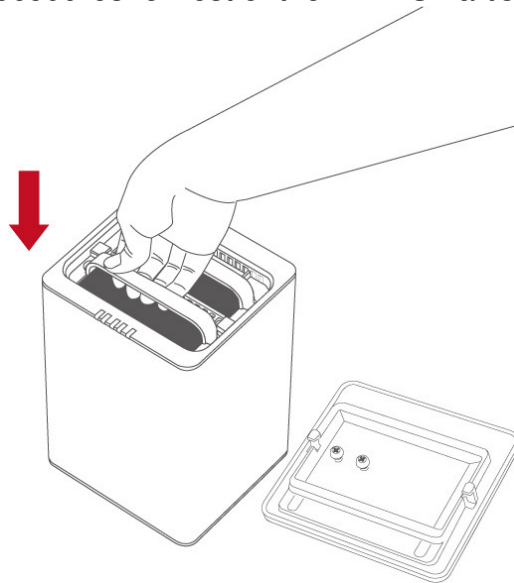

📌 In most cases, you would need to firmly push the HDD SmartGuider Kit to a close until a “thump” sound is heard.

11. Place the RAID System with its Front View facing you and the top lid on. Position both hands on the top lid, one in the front and one in the back. Simultaneously, push the lid firmly downward and toward you, back to front.

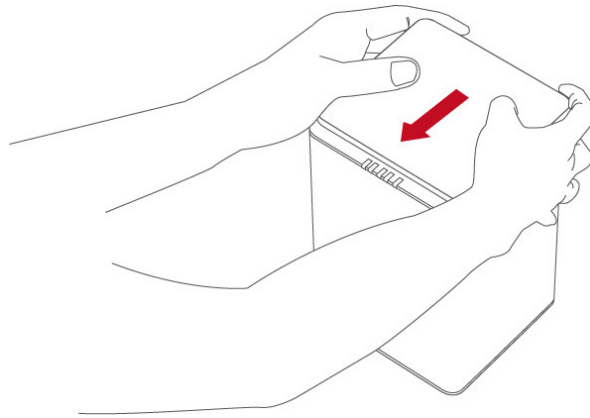


📋 A “click” sound would indicate grasp of the top lid security clasp.




## **CONNECTING THE RAID SYSTEM TO A HOST COMPUTER**


To connect the RAID System, please complete the following steps:

 The Thunderbolt™ technology is designed to control power supply/energy-saving and time management between the host computer and connected Thunderbolt™-compatible devices. Therefore, both the External Power Supply and the Thunderbolt™ Cable need to be connected with the RAID System before the RAID System can be powered “ON”.


1. First, connect the AC/DC Power Adapter (External Power Supply).

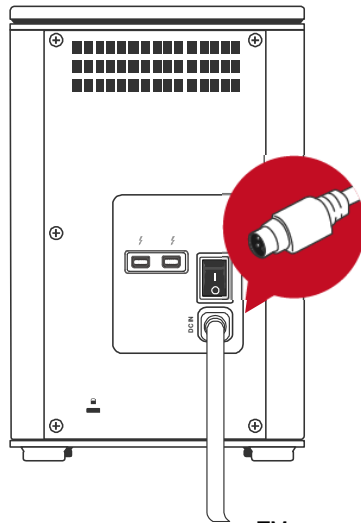


2. Then, insert both ends of the Thunderbolt™ Cable(s) into the corresponding port of the RAID System and the host computer.

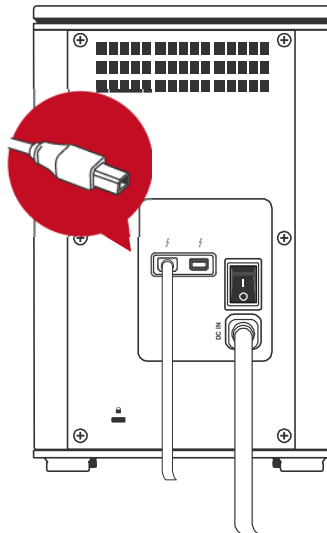



3. Finally, press the Power Switch to the “ON” position.

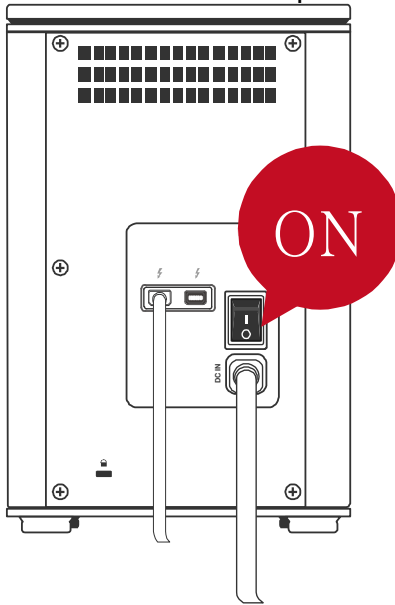

 In order for networked computers to operate properly with the RAID System, both the host computer and the RAID System must remain “ON” at all times.

4. When connected, the Power LED light will become steadily green. If the hard drive/SSDs are inside the RAID System, the Disk LED lights will remain steadily white. If there are no hard drive/SSDs inside the RAID System, the Disk LED lights will not turn on.

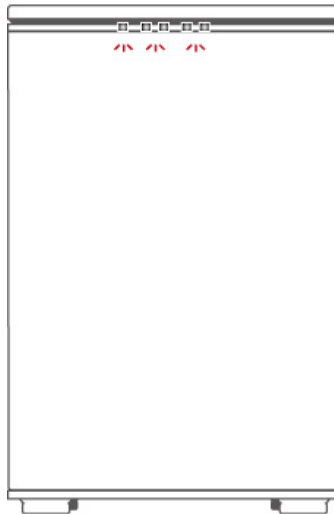


 By using the Thunderbolt™ Cable, up to six Thunderbolt™ Technology-compatible devices can be connected to the host computer, including: the DataTale Thunderbolt™ Series, high-resolution displays, digital devices, and much more. Please see Daisy Chain: Connecting Multiple Devices Section for more information.

## **NUMBER OF HARD DRIVE/SSD SUPPORTING EACH RAID MODE**


<b>RAID Modes</b>	<b>Number of Hard Drive/SSD(s) in the RAID System</b>
<b>JBOD (None RAID)</b>	<b>1 to 2</b>
<b>RAID 0 (Striping)</b>	<b>2</b>
<b>RAID 1 (Mirroring)</b>	<b>2</b>
<b>HYPERDUO (Capacity/Safe)</b>	<b>1 Hard Drive and 1 SSD</b>

## **DISK SLOT NUMBER**

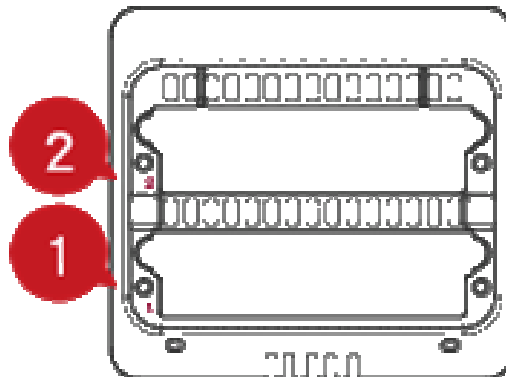

## **LED INDICATORS**

For more information, please refer to “LED INDICATORS” under Glossary section.

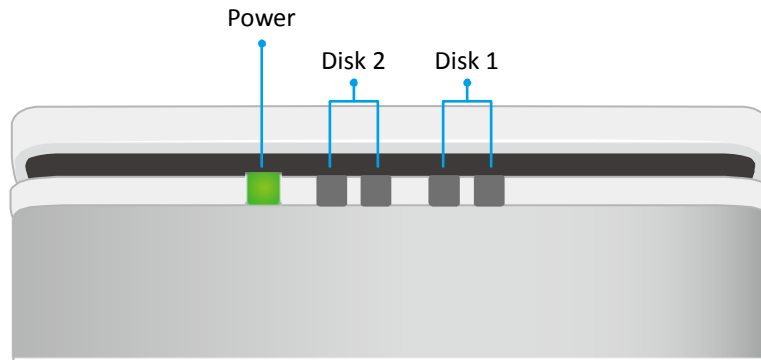


### **All Disks: Inserted / Detected**




### **All Disks: NOT Inserted / Detected**



### **All Disks: Disk 2 Data Access ONLY**

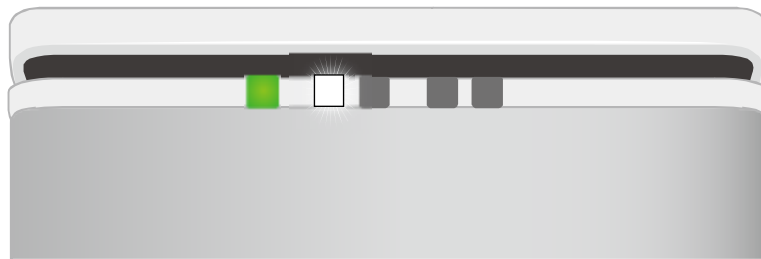

## All Disks: Disk 2 Error ONLY

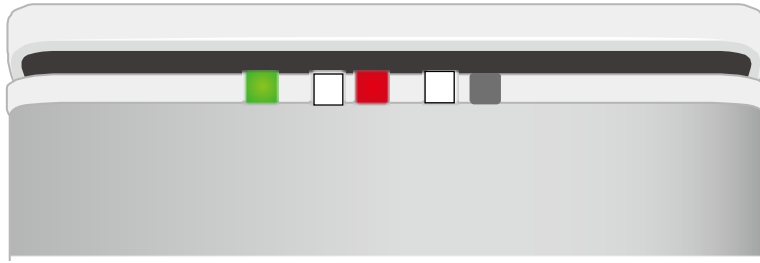

## Fan: Error



📋 Due to the chipset's design, the LED Indicators WILL NOT be able to display any status alerts for Disk Error when the RAID MASTER is CLOSED. Hence, if prefer to receive all alerts and monitor all features via LED Indicators, please keep the RAID MASTER "ON" at all times. Please see the RAID MASTER section bellow.

## **DAISY CHAIN: CONNECTING MULTIPLE DEVICES**

By using the Thunderbolt™ Cable, up to six Thunderbolt™ Technology-compatible devices can be connected to the host computer via Daisy Chain, including: the DataTale Thunderbolt™ Series, other computer hardware (i.e. DVD writer), high-resolution displays, digital devices (i.e. digital video camera), and much more. However, the process/transfer speeds of each device connected along the Thunderbolt™ may vary depending on the device's model/brand and its original connection port itself. To maximize the process/transfer rates, it is highly recommended to place the RAID System at the beginning of the chain, connected directly to the host computer. For more information, please go to Intel's website at [www.intel.com](http://www.intel.com).


## **SAFE REMOVAL OF THE RAID SYSTEM**

Safe removal of the RAID System from the host controller is highly recommended. In order to safely remove the RAID System from the host computer, one would need to eject the device on the actual host computer system.

## **SSD SMARTGUIDER KIT**

The SSD SmartGuider Kit can be utilized in any of the DataTale SMART Series and is available for purchase separately. The SSD SmartGuider Kit is compatible with most 2.5-inch hard drives or 9.5mm thick SSDs.


📋 If 7.0mm thick SSD is used, please first stick the two (2) Damper Strips (included in the Retail Package) onto the SSD Bracket before installing the SSD.

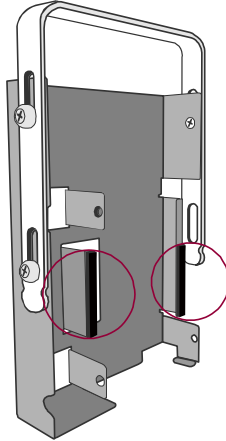

### **SSD SMARTGUIDER KIT: Package**

Each RAID System includes one (1) set of SSD SmartGuider Kit within its original package.

📋 One (1) Spare SSD Screw is included in the package if needed.

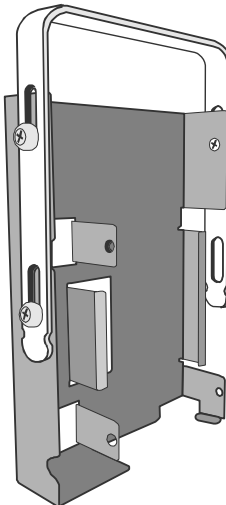

## **SSD SMARTGUIDER KIT: SSD Compatibility**

Due to restrictions of each individual SSD's controller and user's host system, not all the SSDs are compatible when utilized with the RAID System. However, based upon our testing results, here is a list of different SSD models/brands that have successfully completed our compatibility tests:

Intel 520 Series: 60G, 240G

PATRIOT: PYROSE 120G, 240G, MAC Series XT 120G

Liteon: 120G

MemoRight FMT Plus: 120G, 240G

Samsung 840/840Pro/840 EVO: 250G, 500G, 512G


Regardless, there is no guarantee that these models/brands are compatible and functional with the RAID System under any conditions or at all times.




## SSD SMARTGUIDER KIT: Installation

To assemble the SSD SmartGuider Kit onto a SSD, please complete the following steps listed below:


1. First, remove the Handle from the SSD Bracket by untightening the three (3) larger Handle Screws, included in the package.

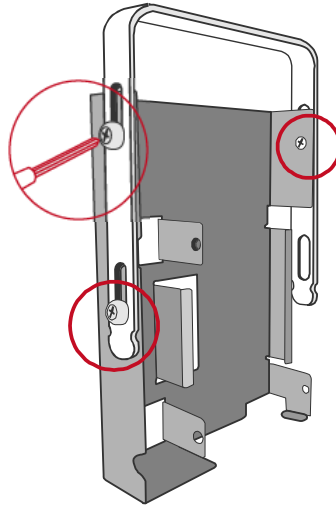


2. Second, place the SSD (the interface connectors oriented toward the opening away from the Handle) into the SSD Insert on the SSD Bracket and align it with the SSD Screw's hole openings.

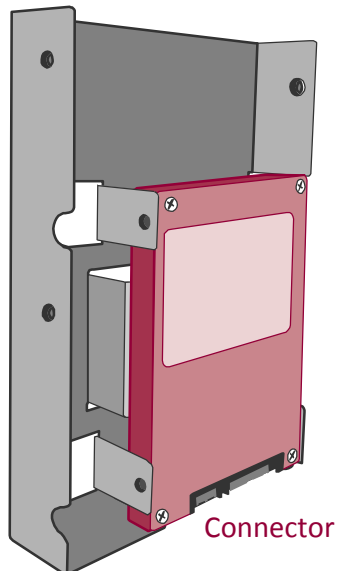

3. Then, tighten the three (3) smaller SSD Screws onto the SSD and SSD Bracket, included in the package.

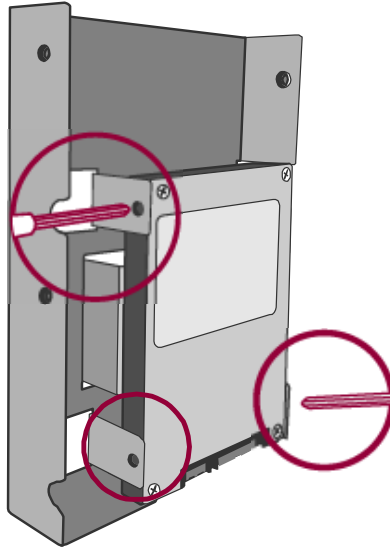

4. After the SSD has been screwed properly onto the SSD Bracket, place the Handle (away from the SSD interface connectors) onto the SSD Bracket and aligned it with SSD Screw's hole openings. Then, tighten the 3 larger Handle Screws, included in the package.

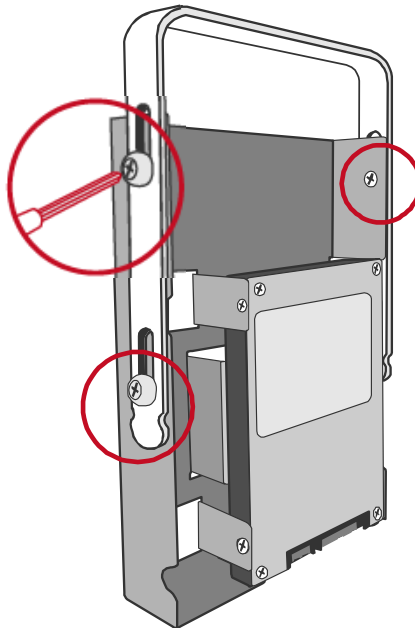

# **RAID MASTER FOR MAC**

The RAID MASTER is a specially-designed GUI software specifically for our DataTale SMART Thunderbolt™ RAID Systems. The RAID MASTER is provided via our websites and it is for Mac only. The RAID MASTER delivers a more convenient yet modern way to manage the RAID System.

## **RAID MASTER: INSTALLATION**

To install the RAID MASTER via Internet, please go to our websites at [www.data-tale.com](http://www.data-tale.com) or [www.datawatchtech.com](http://www.datawatchtech.com) to download the appropriate installation package file.


### ***INSTALLATION FOR MAC***

Please follow the steps listed in the instructions provided below:


1. First, go to System Preferences under Mac's OS and select Security & Privacy. The "Allow applications downloaded from" option should be set to "Anywhere", in order for the download process to work properly.




2. Second, go to one of the website links provided above to download the "dmg" file onto the host computer desktop, and double click on the icon.

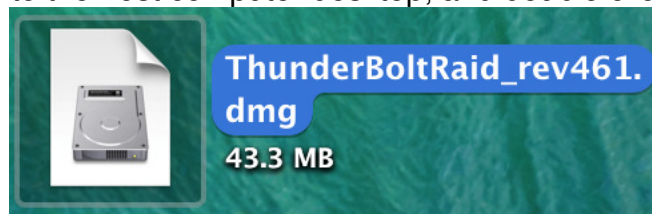


3. Third, double click on the “ThunderBoltRaid\_revXXX” icon and start to install

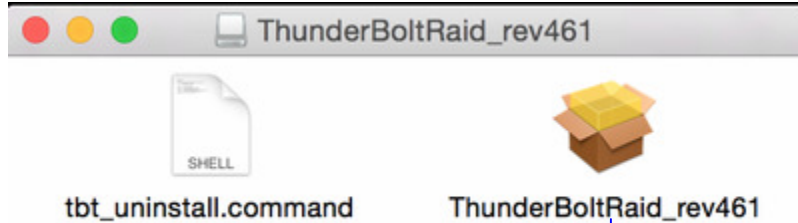


4. Next, the MAC Software Installer will automatically appear with these steps: Introduction, Destination Select, Installation Type, Installation, and Summary. You will be guided through the steps necessary to install this software. Please click “Continue” to begin the installation process.

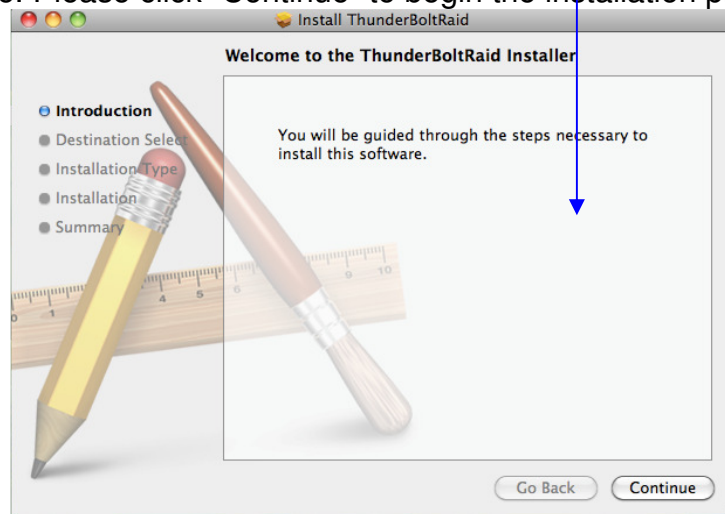


5. Then, under the second step, you will need to select a disk to install the RAID MASTER, which the host computer's available disk(s) will appear for selection. Once a disk is selected, the Installer will specify how much space will be required to install this software. Please click “Continue” to continue the installation process.

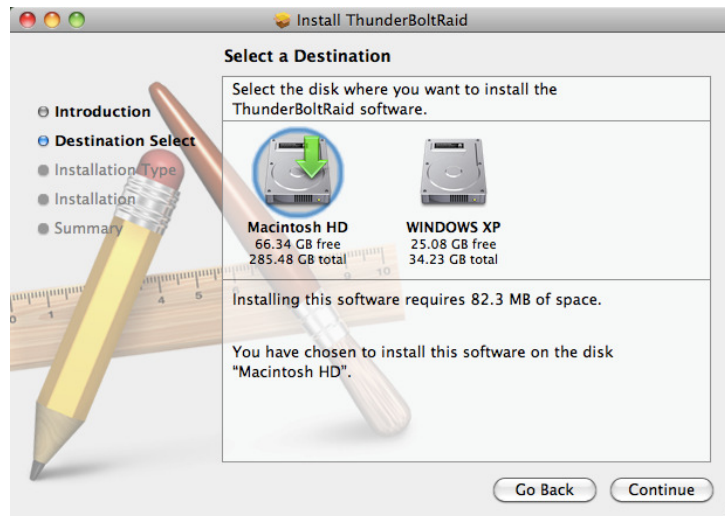


6. To personally change the Installation Type, please click “Customize” to specify your preferences. If the Standard Installation is suitable for you, simply click “Install” to continue the installation process.

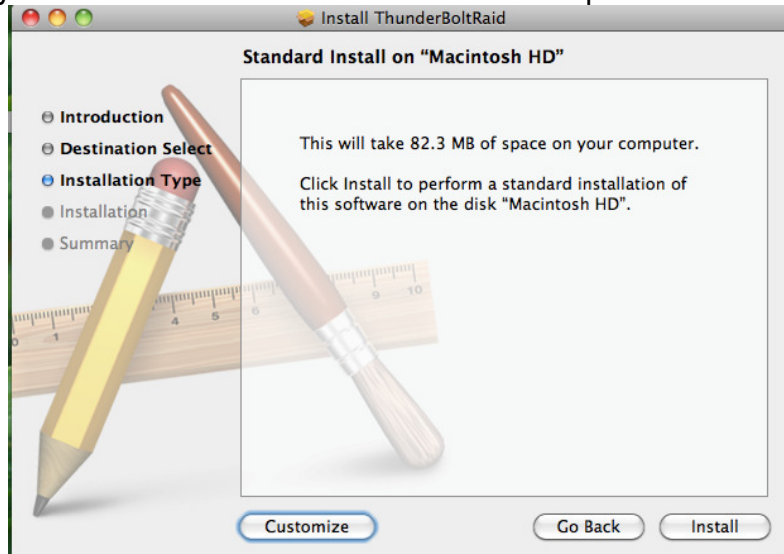


- 📅 If a password is necessary, please enter password and click “Install Software”.

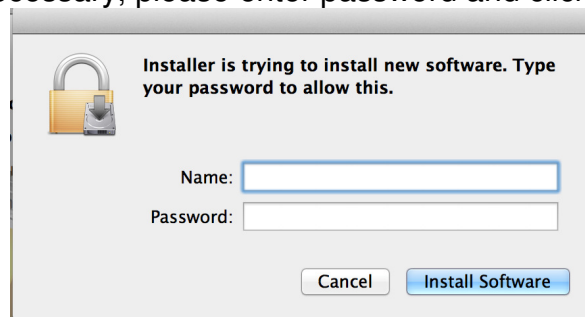


7. This step may take a few moments.

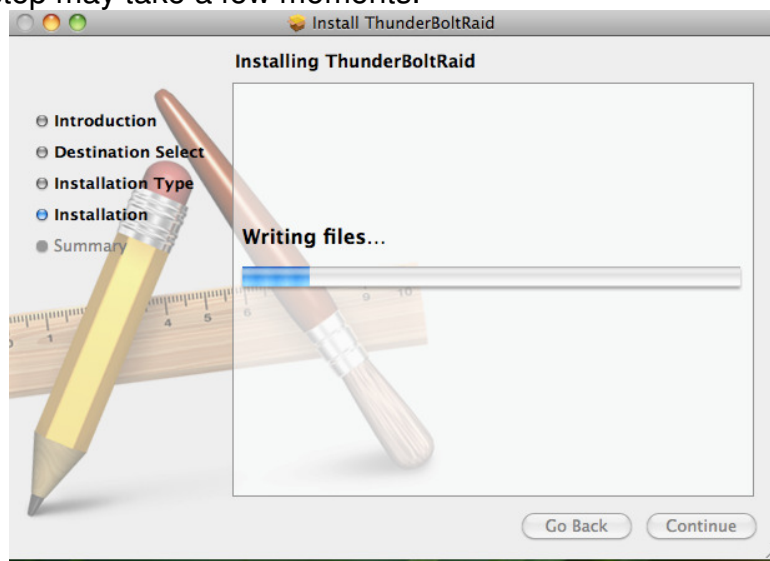

8. Once the RAID MASTER has been successfully installed, please click “Close” to end the Installation process. Now, you may begin using the RAID MASTER!

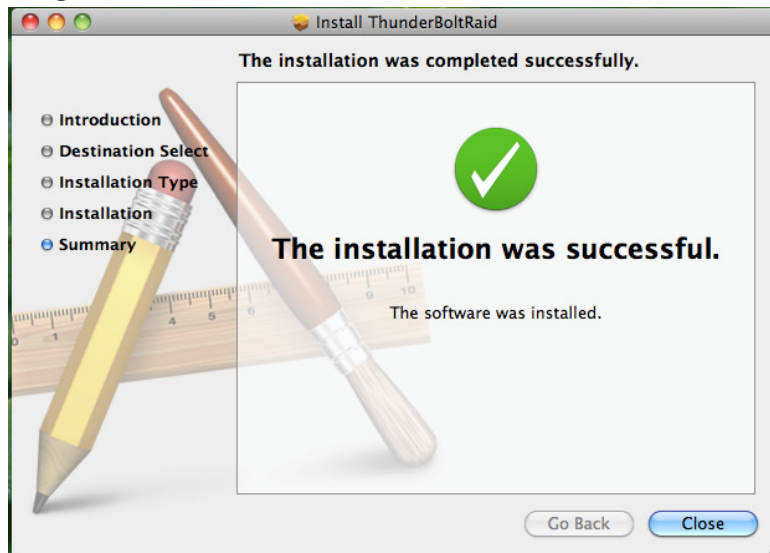


📅 The RAID MASTER icon will appear on the desktop and/or in the Applications folder.

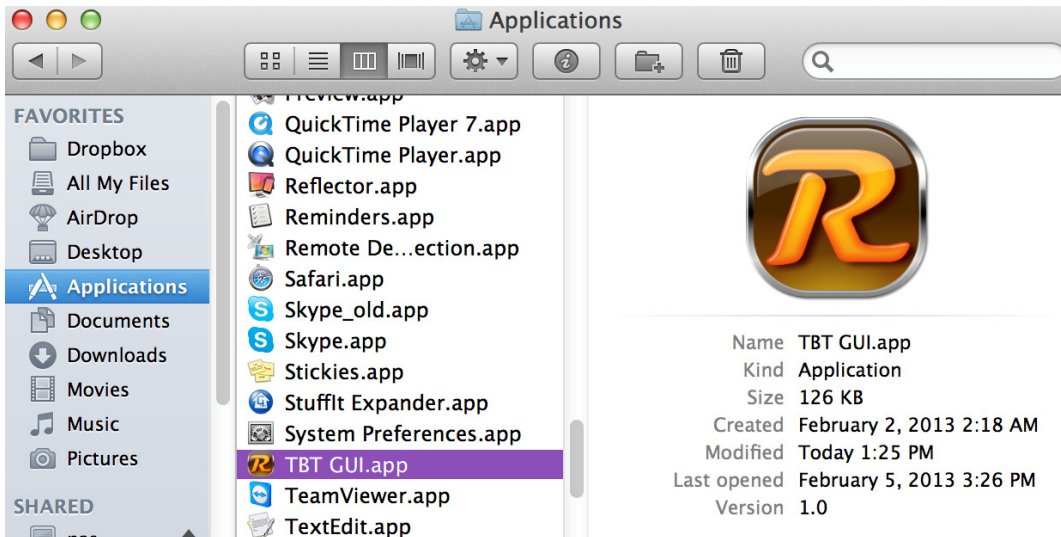

## UNINSTALLATION FOR MAC


To input the Uninstall script your system login password to uninstall.

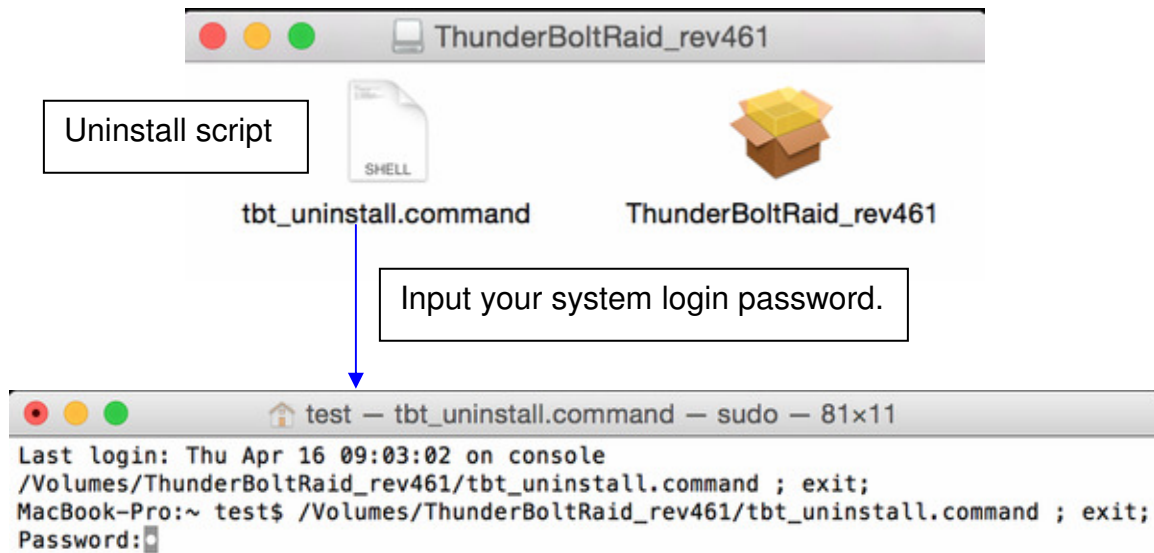







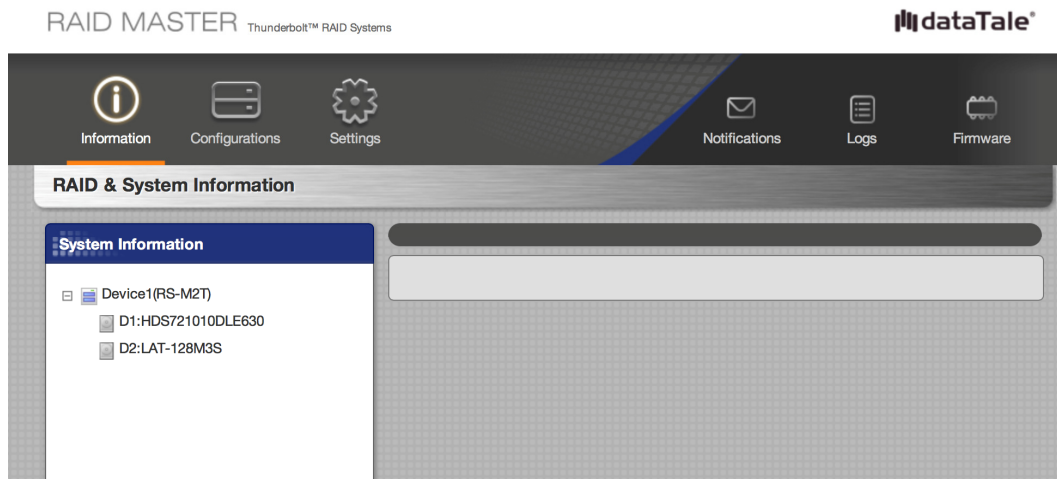

## **RAID MASTER: GUI**

To operate RAID MASTER for the RAID System, please connect the RAID System to the host computer (more information provided under Connecting the RAID System to a Host Computer) and double-click on the RAID MASTER icon to begin:




- **INFORMATION:**  Provides basic information for the RAID System, inserted Disks, and any available RAID Sets.
- **CONFIGURATIONS:**  Provides RAID Mode configurations, inserted Disks' status, and a list of any available RAID Sets.
- **SETTINGS:**  Provides current settings to adjust for Language.
- **NOTIFICATIONS:**  Provides Email settings for notifications and a Notification Center with an Event List to select which Events to notify.
- **LOGS:**  Provides record of all the activities completed for the RAID System and can save the log information as a text format file.
- **FIRMWARE:**  Provides RAID System's current Firmware information and Firmware Update feature.

# RAID MASTER: FEATURES


## INFORMATION

Once the RAID System is connected to the host computer, the RAID MASTER will provide basic information of the RAID System under the Information icon.


- **DEVICE INFORMATION:** Device number, Boot Manager (Chip itself), SATA Firmware Version (Chip itself), Vendor Name (Brand), Device Name (RAID System), and UID (Thunderbolt™ Unique Identification Number).

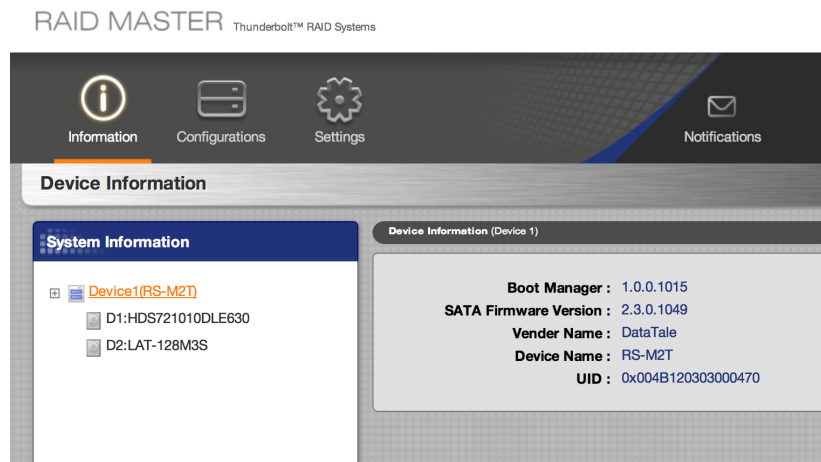

- **RAID & DISK INFORMATION:** Device number, RAID Set number (P#), RAID Mode Status, Total Capacity, Inserted Disk(s), Block/Sector Size, RAID Mode; and all inserted Disks' type (HDD/SSD), volume (GB), and Disk number.

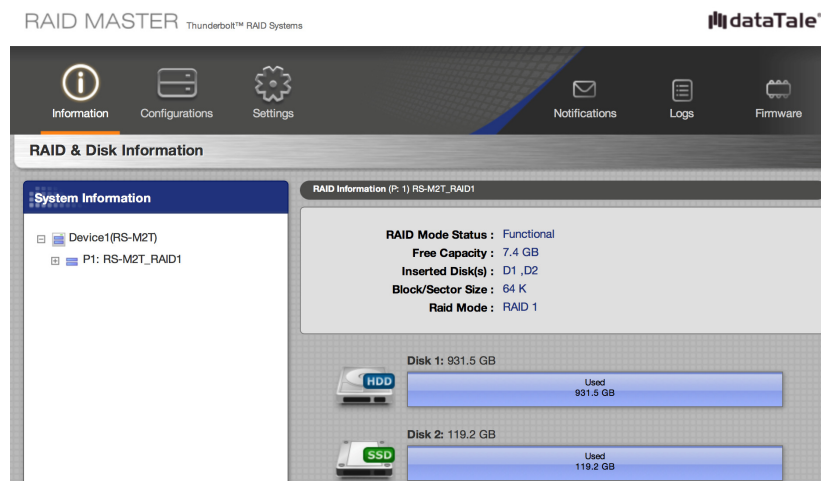


- **DISK INFORMATION:** Disk number (D#), Type (HDD/SSD), Model, Disk/Used/Free Capacities, Status, Speed, Serial number, Firmware Version (of the Disk itself), and Hard/Solid-State Disk(s) detailed information

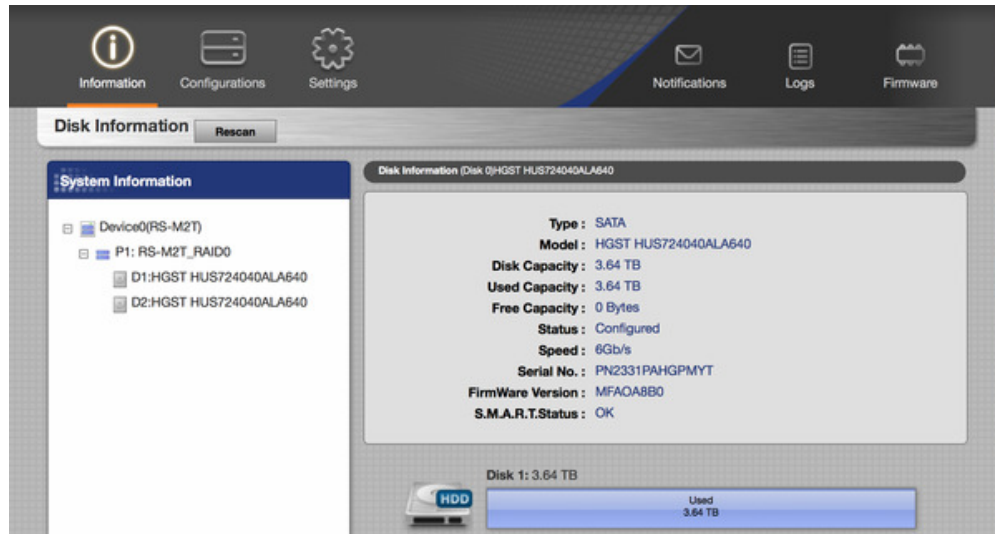


Once the RAID System is connected to the host computer, the RAID MASTER will show detailed information of the RAID System and its inserted Disks. Because the RAID MASTER can manage more than “one Unit” of the RAID System, each RAID System connected to the host computer will reflect as “Device” and in the numbering order of “Device1, Device2, ...” respectively. The System List will reflect the RAID Sets as “P1, P2, ...” and the Disks as “D1, D2, ...” respectively.


## RAID MASTER Thunderbolt™ RAID Systems

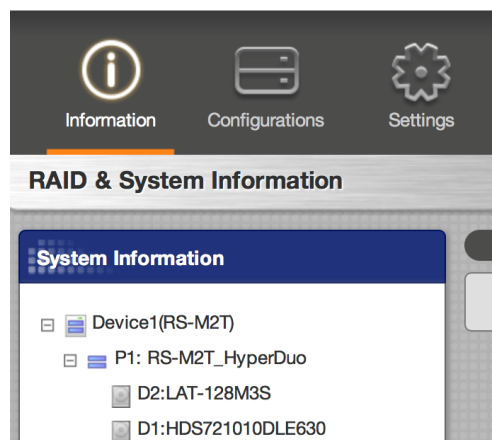

**RAID CONFIGURATIONS:** Provides a selection of which Devices to choose from; a list of existing RAID Sets' information (Number, RAID Name, RAID Mode, Capacity, Disk Number); a selection of available RAID Modes to choose from; and the inserted Disks' status. There are operative selections to choose from: Create RAID, Delete RAID, Rebuild, Select RAID Mode (Available RAID Modes will appear based on number/type of Disks selected), and which Disk(s) to select along with its individual capacity information.

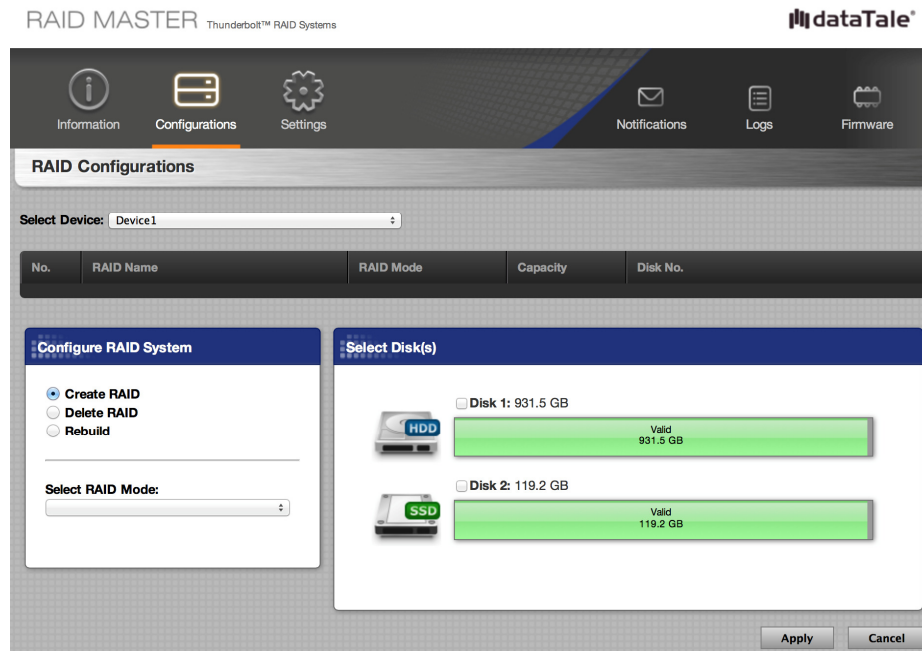

**SETTINGS:** Provides current Language setting with a selection of available Languages to choose from.

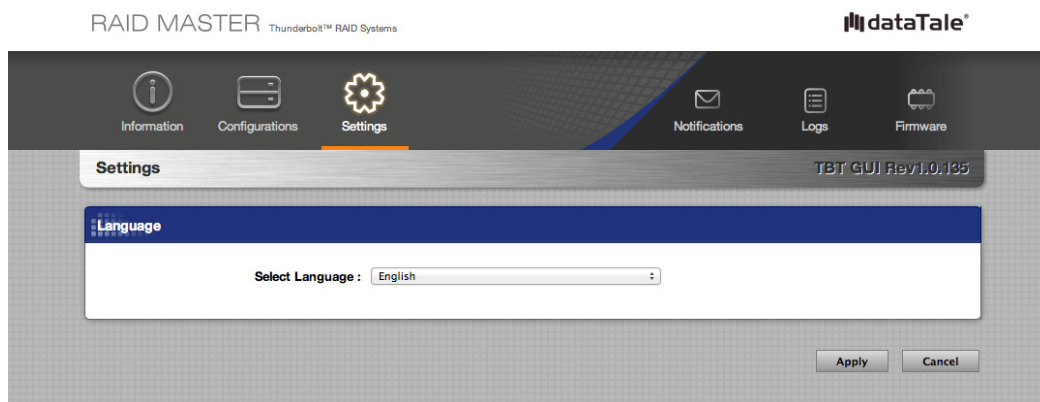

**NOTIFICATIONS:** Provides email settings for notifications and a Notification Center with an Event List to select which Events to notify, including: SMTP Server Name, SMTP Server Port, Sender's Email, Sender's User Name, Sender's Password, Recipient's Email, Send Mail Test, and Upload/Save Profile. The Notification Center provides common Events to choose from, including: RAID mode is broken, Rebuild process has failed, Data read/write process has failed, RAID mode is degraded, Disk is unplugged, RAID is deleted, and Disk is inserted.

The screenshot displays the RAID MASTER Thunderbolt RAID Systems web interface. The top navigation bar includes icons for Information, Configurations, Settings, Notifications (selected), Logs, and Firmware. The main content area is titled "Notifications" and contains two sections:

- Email Settings:** This section includes input fields for SMTP Server Name, SMTP Server Port, Sender's Email, Sender's User Name, Sender's Password, and Recipient's Email. There is also a checkbox for "SSL Support" and a "Send Mail Test" button.
- Notification Center:** This section is titled "Check the box next to desired event(s)". It contains a list of events with checkboxes:
  - RAID mode is broken
  - RAID mode is degraded
  - Rebuild process fail
  - Rebuild process has completed
  - Disk S.M.A.R.T Error
  - RAID Bad Sectors
  - Fan Error

At the bottom of the interface, there are buttons for "Send Mail Test", "Save Profile", "Upload Profile", "Save", and "Clear".

**EVENT LOG:** Provides a record of all the activities completed for the RAID System and option to save its information as a text format file, including: Event No. in the order of occurrence, of which Device & under which RAID Mode, Date & Time happened, Type of activity, Message available if any, to save the record as a text format file under Save as File, to clear the record under Clear All, Total number of Pages, and Go to which Page.

RAID MASTER

Thunderbolt™ RAID Systems

dataTale®

Information

Configurations

Settings

Notifications

Logs

Firmware

Event Logs

Save as HTML

Clear All

No.	Date/Time	Device Information	Type	Event Detail
21.	2015-04-16 14:50:27	Device 1:RS-M4T P1:RS-M4T_RAID0		A RAID is deleted.
20.	2015-04-16 14:50:17	Device 1:RS-M4T P2:NEW_VD		A RAID is deleted.
19.	2015-04-16 14:49:30	Device1:RS-M4T P2:NEW_VD		RAID in broken mode
18.	2015-04-16 14:49:20	Device1:RS-M4T P1:RS-M4T_RAID0		RAID in broken mode
17.	2015-04-16 14:48:59	Device1: P1:		RAID in broken mode
16.	2015-04-16 14:41:53	Device1:RS-M4T		Fan error detected
15.	2015-04-14 17:43:33	Device 1:RS-M2T RS-M2T_RAID0		A RAID is created.
13.	2015-04-14 17:07:02	Device 1:RS-M4T RS-M4T_RAID0		A RAID is created.
14.	2015-04-14 17:07:02	Device1:RS-M4T		Fan error detected
12.	2015-04-14 16:28:15	Device1:		Fan error detected

| 1 | 2 | 3 | Next |

Total: 3 pages / go to page: 1 

Go

## FIRMWARE INFORMATION

Provides RAID System's current Firmware Information and Firmware Update features, including: Product Name, SATA Firmware Version (Chip itself), Manufacturer, and Daisy Chain Order (current selected Device), Select Firmware to Update under Firmware Update.

RAID MASTER

Thunderbolt™ RAID Systems

dataTale®

Information

Configurations

Settings

Notifications

Logs

Firmware

Firmware Information

TBT GUI Rev1.0.140

Select Device: Device1

Firmware Information

Product Name : DataTale

SATA Firmware Version : 2.3.0.1049

Manufacturer : ONNTO Corp

Daisy Chain Order : 1

Firmware Update

Select Firmware : Choose File no file selected

Update

# **RAID MASTER: OPERATION**


## **RAID CONFIGURATIONS: SET UP A NEW RAID SET**

To set up a new RAID Set for the RAID System, please complete using the following steps:

📅 In order to change an existing RAID Set for the inserted Disks in the RAID System, the existing RAID Set must be deleted first. Please complete the steps under “RAID MODE: DELETE AN EXISTING RAID SET” first, and then continue under “RAID MODE: SET UP”.


📅 Please review under “Number of Hard Drive/SSD Supporting Each RAID Mode” or individual “RAID Mode” sections under Glossary for more detailed information and assistance on choosing the most suitable RAID Mode for your needs. If the number/type of inserted Disks do not qualify for a particular RAID Mode, that RAID Mode will not appear under Select RAID Mode list. More than one RAID Set can be created for different Disk(s), but must be created separately.

1. Click on the Configurations icon and select the available options based on preferences by following the steps in the picture.

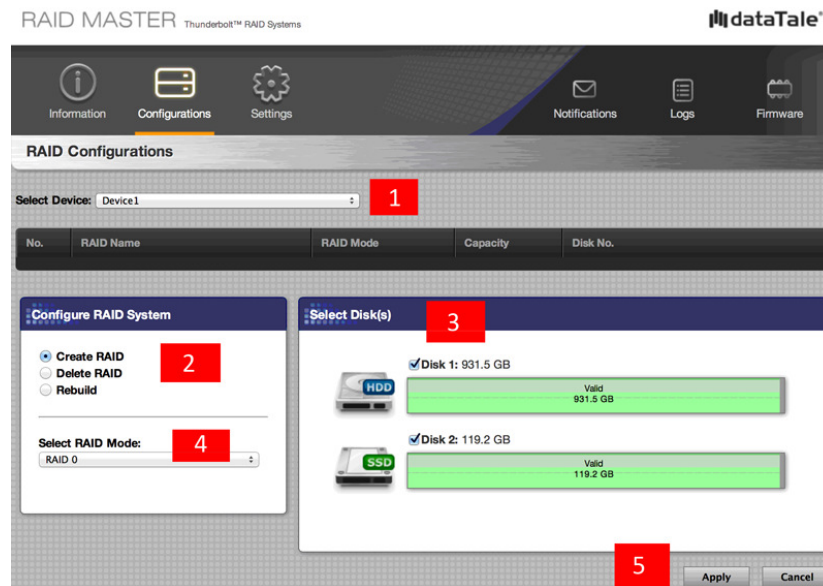


2. Once begin, the RAID MASTER will display a Popup Window stating, “RAID Mode creation/deletion will erase all previously-stored data in the Disk(s)! Are you sure you want to create the RAID?” Click on the Yes icon to confirm and continue the process.




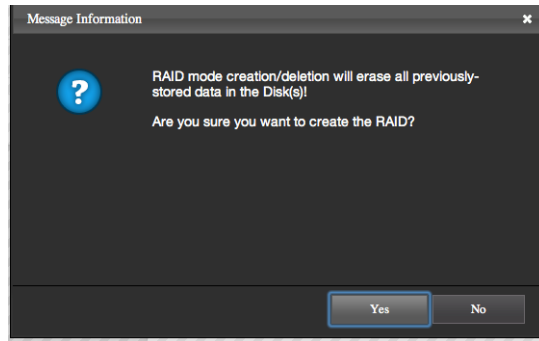


3. Once the RAID Creation process is completed, the RAID MASTER will display a Popup Window stating, "RAID mode successfully created!" Click on the "OK" icon to confirm and finish the process.

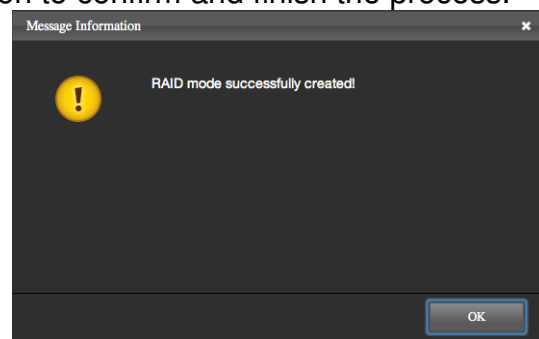

📌 If the new RAID Set creation has failed, the RAID MASTER will display a Popup Window stating, "RAID mode creation failed!" Click on the "OK" icon to confirm and double check on the Inserted Disk(s) before restarting the process.

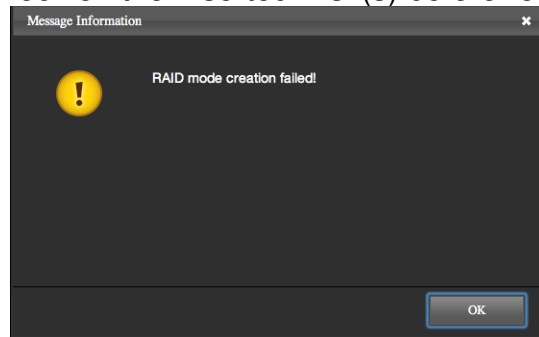


4. Now, the newly created RAID Set will appear under the RAID Set list reflecting basic information. The chosen Disks for the new RAID Set will disappear and only the available (Valid) Disk(s) under Select Disk(s) will appear. The newly created RAID Set is now ready for usage in the RAID System!

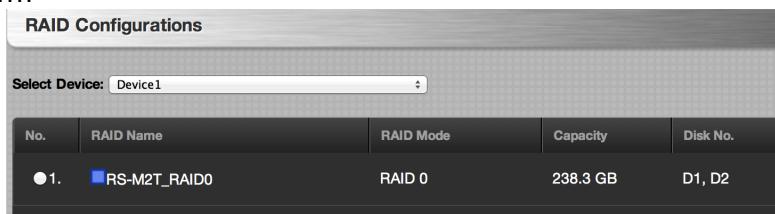





## RAID CONFIGURATIONS: DELETE AN EXISTING RAID SET

To delete an existing RAID Set for the inserted Disk(s) in the RAID System, please complete using the following steps:


 Deleting an existing RAID Set will erase all data stored on the Disk(s). If there are saved data in the Disk(s), please remember to backup all the data before deleting the existing RAID Set.

1. Click on the Configurations icon and select the options based on preferences by following the steps in the picture.

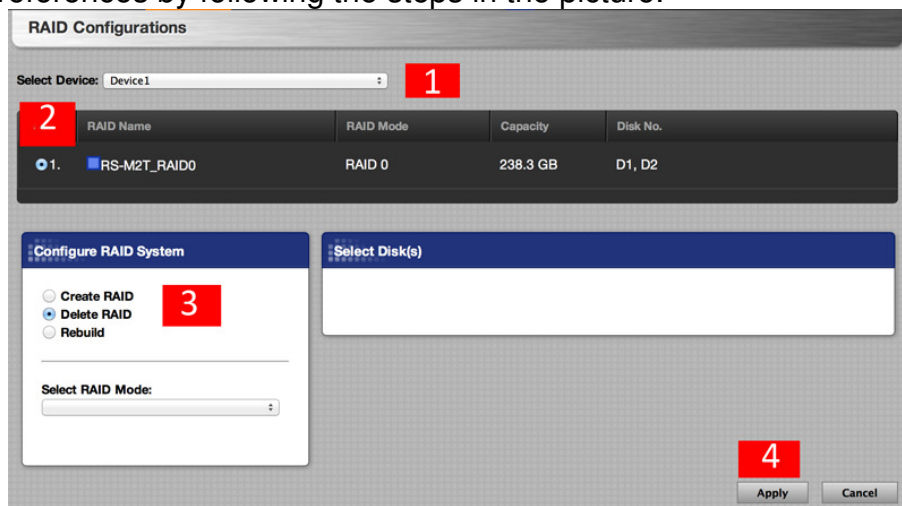


 A list of existing RAID Set(s) should appear for the inserted Disk(s). If the preferred RAID Set does not appear on the list, please re-start/connect the RAID System and the host computer.


2. Once begin, the RAID MASTER will display a Popup Window stating, "RAID Mode creation/deletion will erase all previously-stored data in the Disk(s)! Are you sure you want to Delete RAID?" Click on the Yes icon to confirm and continue the process.

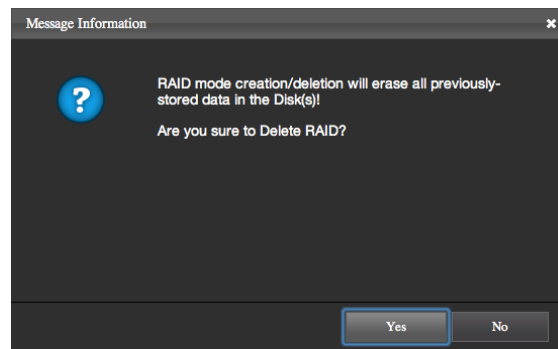


3. Once the RAID deletion process is completed, the RAID MASTER will display a Popup Window stating, “RAID mode successfully deleted!” Click on the “OK” icon to confirm and finish the process.

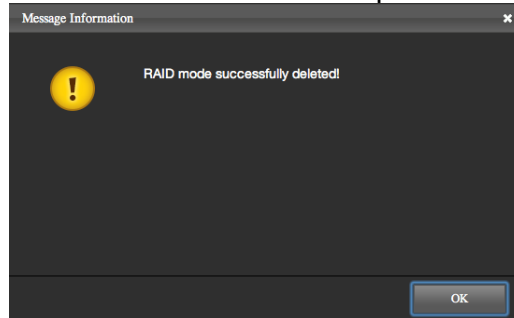

- 📅 If the new RAID Set deletion has failed, the RAID MASTER will display a Popup Window stating, “RAID mode deletion failed!” Click on the “OK” icon to confirm and restart the process.

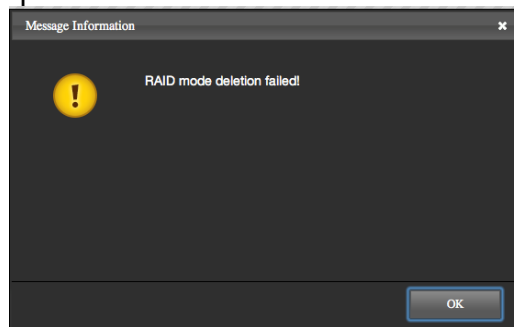


4. Now, the deleted RAID Set will disappear from under the RAID Set list. The previously-chosen Disks for the deleted RAID Set will reappear as available (Valid) Disk(s) under Select Disk(s). The available (Valid) Disk(s) are now ready for usage!

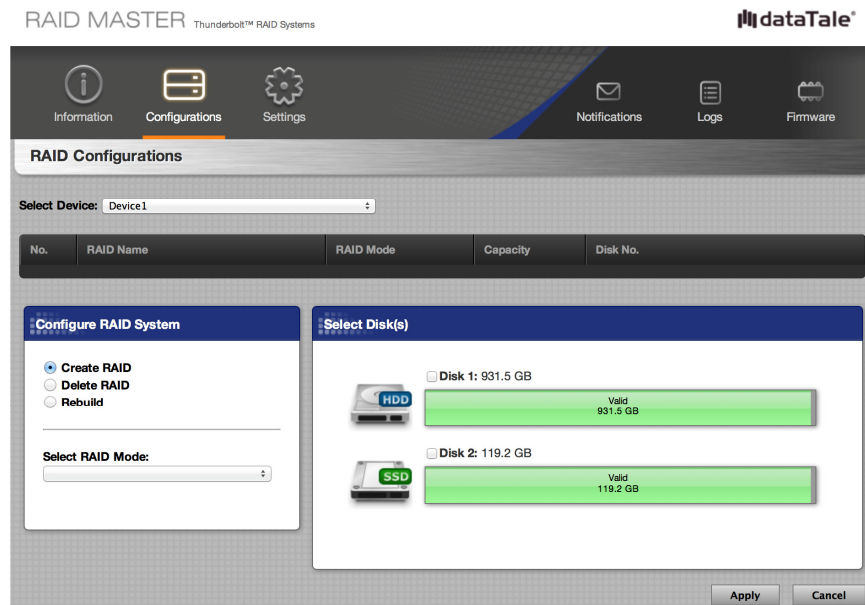


## RAID CONFIGURATIONS: REBUILD A RAID SET

To Rebuild a degraded or broken RAID Set, please complete using the following steps:

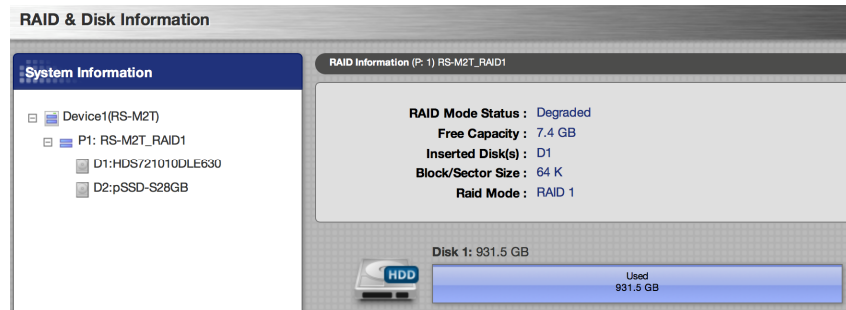


📅 If the RAID System loses connection to the host computer, the Rebuild process will stop. Even if the RAID System is powered off, the RAID System will retain the Rebuild status in memory. When the RAID System is powered “on” again, the Rebuild process will resume from the previous status.



1. Click on the Configurations icon and select the options based on preferences by following the steps in the picture.

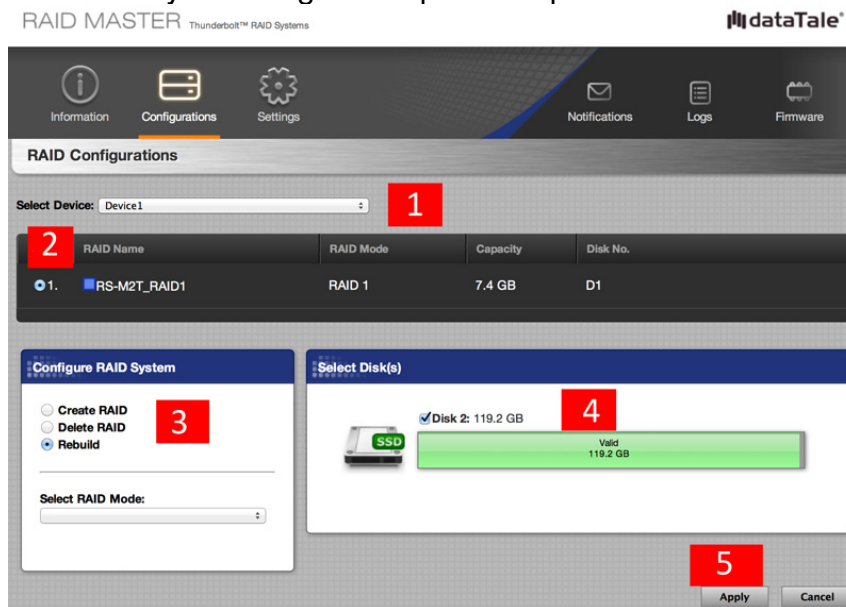


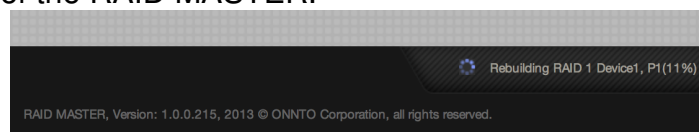
📅 If an existing RAID Set is NOT selected for Rebuild under the list of existing RAID Set(s) for the inserted Disk(s), the RAID MASTER will display a Popup Window stating, “Please select an existing RAID mode for rebuild”. If the preferred RAID Set does not appear on the list, please re-start/connect the RAID System and the host computer.

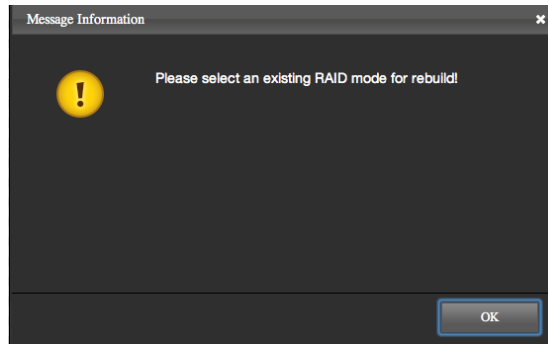


2. Once begin, the RAID MASTER will display a Popup Window stating, "Are you sure you want to rebuild the RAID mode?" Click on the Yes icon to confirm and continue the process. If another Popup Window appears stating, "Starting RAID rebuild, please wait a few moments", click on the OK icon to continue. Please DO NOT Disconnect or Power Off the RAID System/host computer at this time unless absolutely necessary.

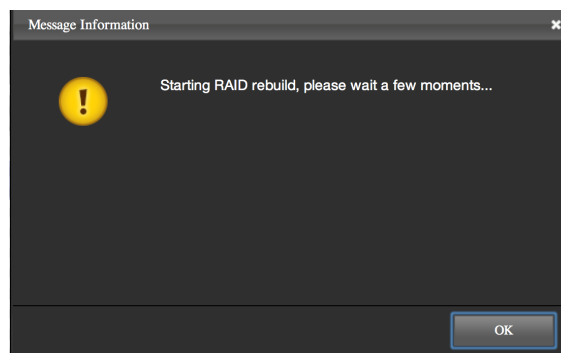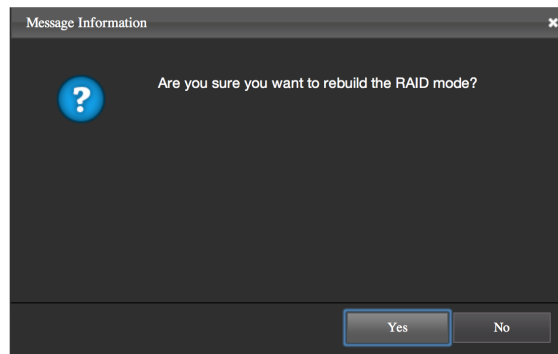


 To monitor the Rebuild process, a progress percentage status will appear on the bottom bar of the RAID MASTER.




- Once the RAID Rebuild process is completed, the RAID MASTER will display a Popup Window stating, “RAID mode successfully rebuild!” Click on the “OK” icon to confirm and finish the process.

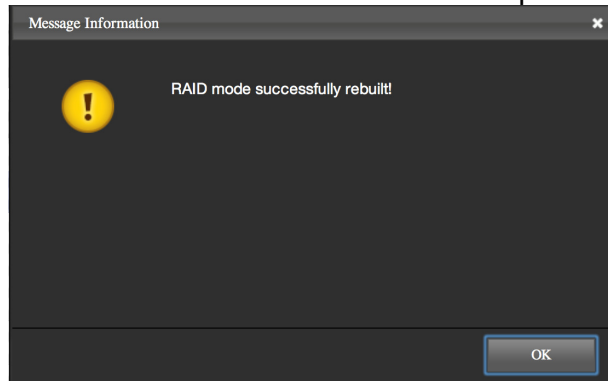

- 📅 If the RAID Rebuild has failed, the RAID MASTER will display a Popup Window stating, “RAID mode rebuild failed! ...!” Click on the “OK” icon to confirm and double check on the Inserted Disk(s) before restarting the process.

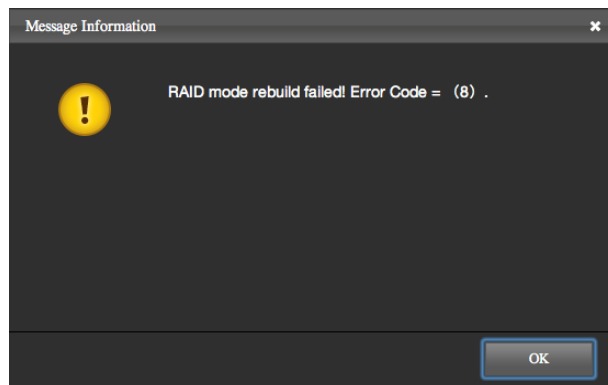

- After the Rebuild process is completed, the data in the new hard drive will replace the damaged or non-functioning hard drive. The RAID Mode Status should state, “Functional” under RAID Information. Remember to discard or replace the non-functional Disk(s) before continue using the RAID System!

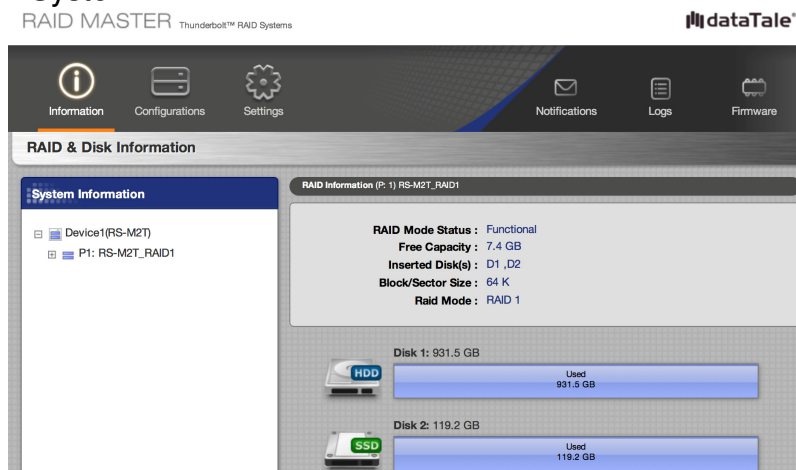


## **WINDOWS OS: Plug And Play Driver**

The RAID System is compatible with Windows OS and can be managed via other resources. In order for a Thunderbolt device to operate correctly on a Windows OS via Windows 7/8 or Server 2008, the Plug And Play Driver (Marvell) needs to be installed before utilizing other resources.


## **Plug And Play Driver: INSTALLATION**

To download and install the Plug And Play Driver via Internet, please first go to our websites at [www.data-tale.com](http://www.data-tale.com) or [www.datawatchtech.com](http://www.datawatchtech.com) to download the appropriate Windows Plug And Play Driver installation “zip” file. Please complete the following steps provided below:


1. First, double click on the file named “Marvell\_AHCI\_XXXXXX.zip” to unzip.
2. Second, connect the RAID System to the host computer (Windows) via Thunderbolt Cable, power “ON” the RAID System itself, and power “ON” the host computer (Windows).
3. Next, select “Device Manager” under “System Tool” of “Computer Management”, and click to expand under “IDE ATA/ATAPI Controllers”.

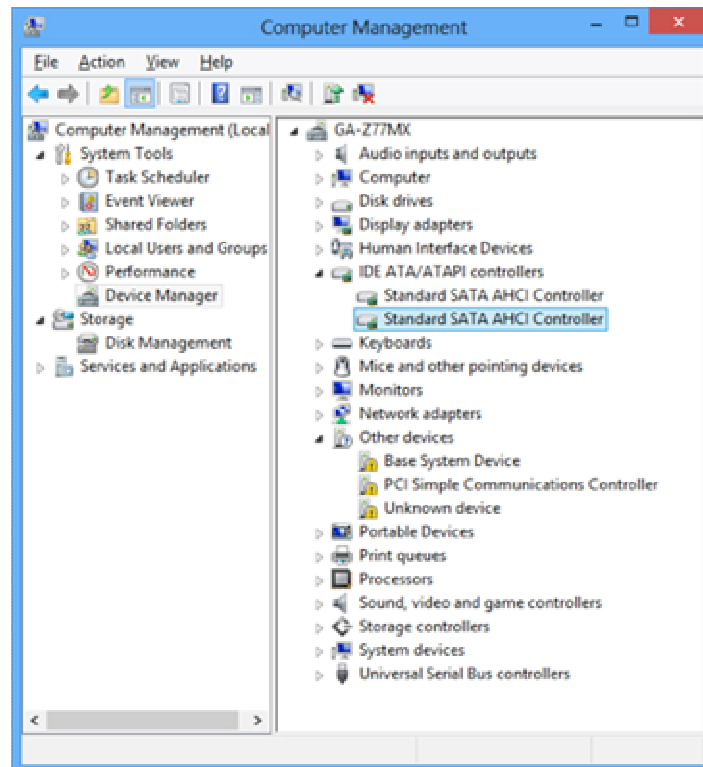


4. If there are more than one (1) controller with the same exact name, please check each controller's "Properties" to find the controller stating "92XX" for its "Value", which indicates the RAID System. To find the "Value", please right-click on the controller's name and select "Properties" and click on the "Details" tab to see its "Value".

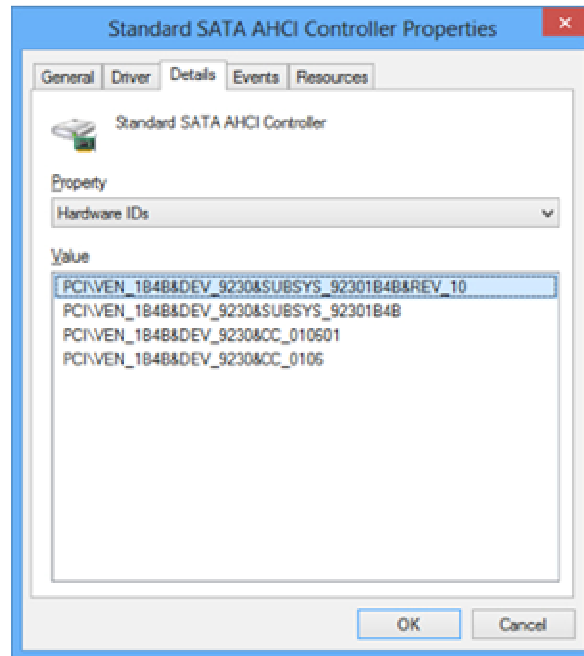


5. Once the correct Controller is found, click on the "Driver" tab and select "Update Driver".

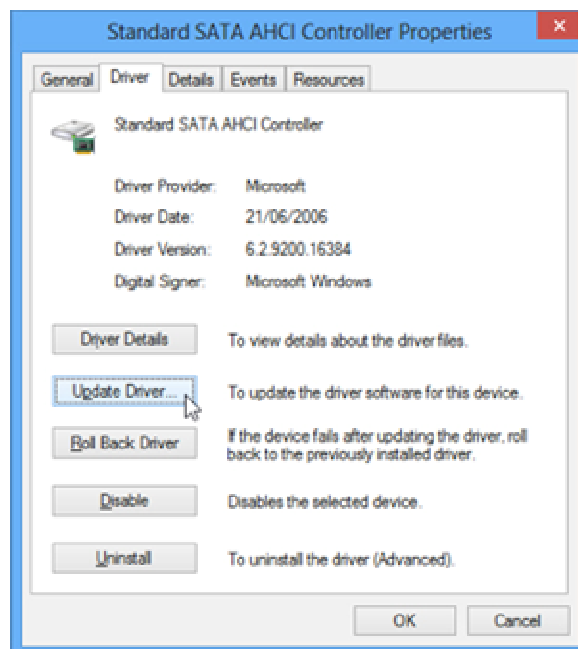

6. Then, find the unzipped Windows Driver file by clicking on “Browse” to choose the folder name stating, “Marvell\_AHCI\_XXXXXX” and click on “Next” to continue.

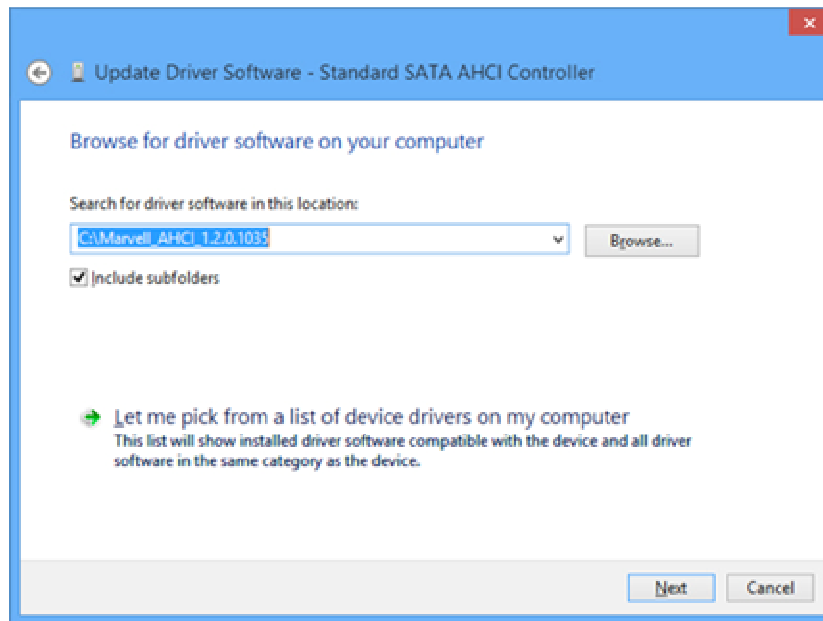


7. Finally, the installation may take a few moments. Please DO NOT power “OFF” the RAID System and/or the host computer at this time. Once the Plug And Play Driver has been successfully installed, please click on “Close” to end the installation process.

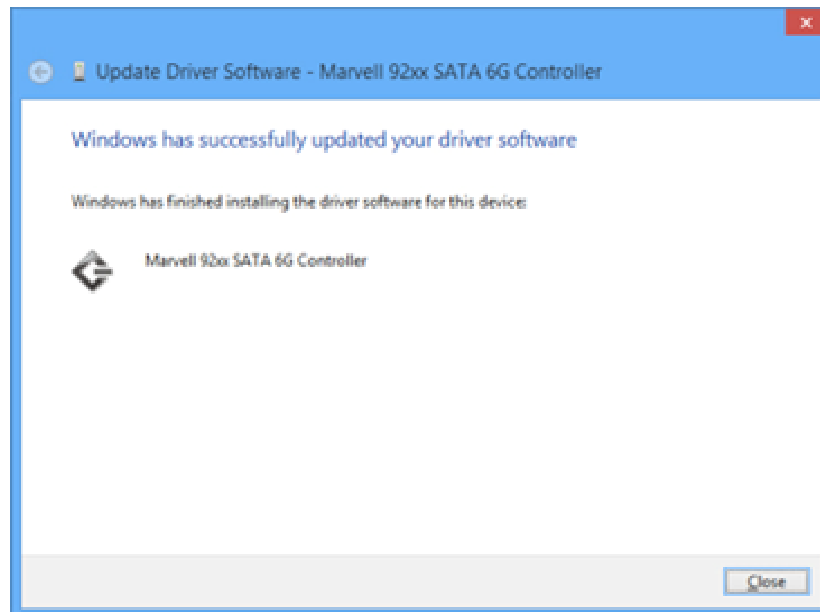



8. Now, you may begin using the RAID System on a Windows OS host computer. The RAID System's name will change to, "Marvell 92xx SATA 6G Controller" and move under "Storage Controllers".

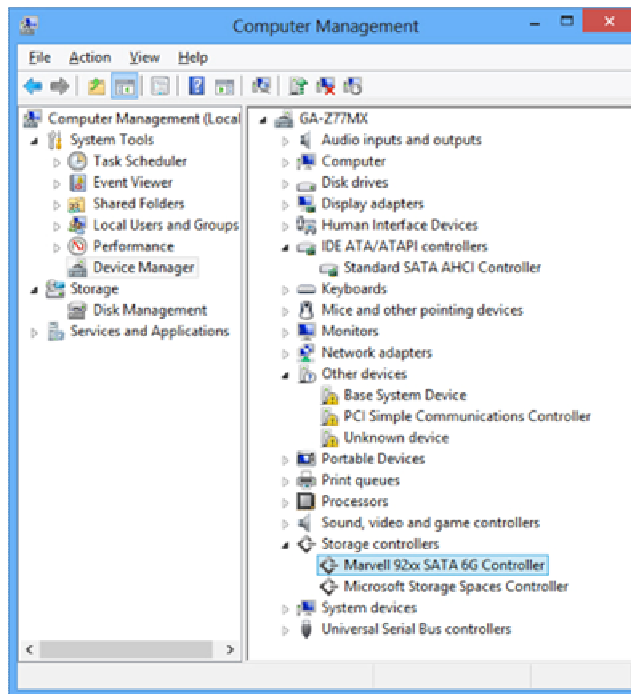

## **MARVELL STORAGE UTILITY (MSU) FOR WINDOWS**

The Marvell Storage Utility (MSU) is a GUI software for Windows. The MSU is provided via our websites and it delivers a professional yet convenient way to manage the RAID System.

## **MSU INSTALLATION**

To install the MSU via Internet, please go to our websites at [www.data-tale.com](http://www.data-tale.com) or [www.datawatchtech.com](http://www.datawatchtech.com) to download the installation file. This software is also provided with the on-line help for your easy use.

## **GLOSSORY**

Detailed descriptions and/or pictures are provided as reference for better understanding of the RAID System and RAID MASTER. For any technical troubleshooting issues, please review the “Troubleshooting” and/or “Teach Me” sections under Support on our websites.

### **LED INDICATORS**

#### ***POWER LED x 1***

Indicators	Color
<b>Power on</b>	Green
<b>Power off</b>	None


#### ***DISK LED x 4***

There are 2 LEDs for each Disk Slot. The left Disk LED indicates “Connection/Access” and the right Disk LED indicates “Health”.

The Connection/Access Disk LED is only one-color (white). When the RAID System is connected and a hard drive/SSD is inserted, the white Disk LED will be on. When the hard drive/SSD is being accessed or rebuilding, the white Disk LED will blink. When the hard drive/SSD is not healthy, the white Disk LED will also be on.

The Health Disk LED is only one-color (red). When the hard drive/SSD is not healthy, the red Disk LED will be on.

Indicator	Disk (1, 2)	
	Connection/ Access	Health
<b>Disk Error</b>	White	Red
<b>Data Access</b>	White (Flash)	None
<b>Fan Error</b>	White	Red (Flash)
<b>Disk Not Detected</b>	None	None
<b>Disk Detected</b>	White	None

 Due to the chipset design, the LED Indicators WILL NOT be able to display any status alerts for **Disk Error** when the RAID MASTER is CLOSED. Hence, if prefer to receive all alerts and monitor all features via LED Indicators, please keep the RAID MASTER "ON" at all times. Nevertheless, this will not affect any of the RAID MASTER operations and functions.

# RAID MASTER

## POPUP WINDOWS


### ➤ EJECTED

Either Popup Windows may appear as a warning whenever a RAID Set is created, deleted, or rebuild. It may also appear if any of the inserted Disk(s) have become “non-functional”.




### ➤ SELECT A RAID MODE

This Popup Window may appear as a warning whenever a RAID Mode (Create) and/or an existing RAID Set (Delete) are not selected under RAID Configurations.

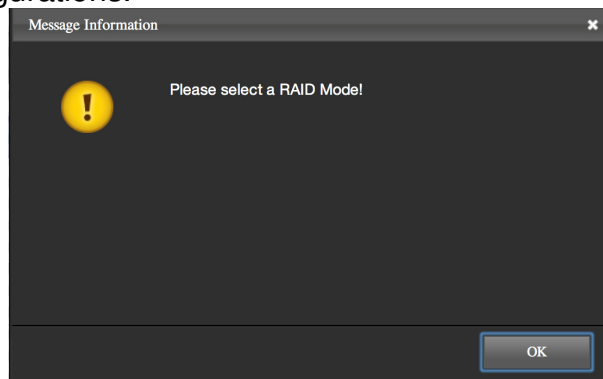


### ➤ SELECT A DEVICE

This Popup Window may appear as a warning whenever a Device is not selected under any of the Main pages of the RAID MASTER.

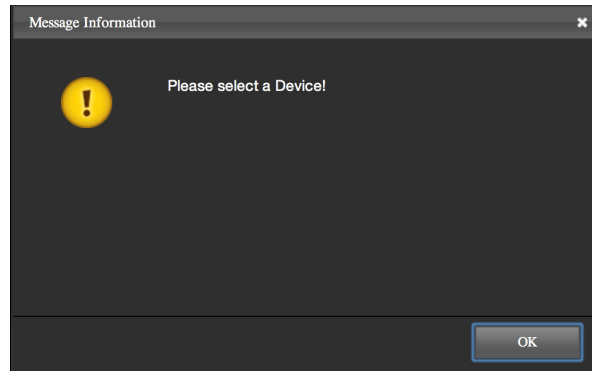

➤ **SCANNING**

A “Scanning devices, please do not disconnect devices from host” Popup Window may appear as a warning whenever the host computer or the RAID System is powered “ON/OFF” while connected, and after removing/installing disk(s).

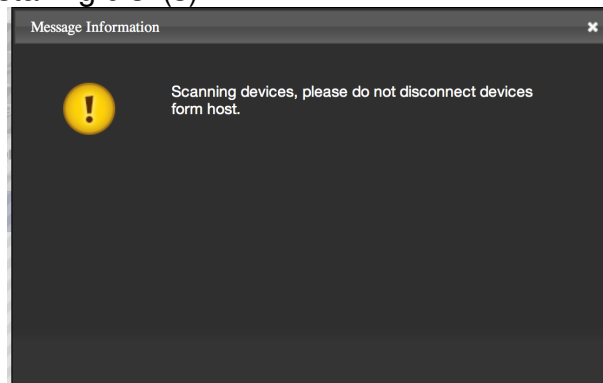

➤ **BROKEN**


A “Broken” Popup Window may appear as a warning if any of the inserted Disk(s) in a RAID Set have become “non-functional”.


➤ **DEGRADE**

A “Degrade” Popup Window may appear as a warning if any of the inserted Disk(s) in a RAID Set have become “non-functional” and the RAID Set is in danger of losing its stored data unless proper steps are taken.

## REBUILD


The RAID MASTER's Rebuild feature is available manually under RAID 1 and HyperDuo\* (Safe Mode Only). If one of the existing RAID Set becomes "degraded/broken", functional hard drive/SSDs can be inserted to Rebuild and recover the data within the degraded/broken RAID Set. However, recovery of the data/RAID Set depends on each situation (RAID Mode, number of "non-functional" Disks, etc).


 The use of identical hard drive/SSDs from the same manufacturer, having the same capacity and RPM is highly recommended.

 Please read the "REBUILD: ..." section under "RAID MASTER: OPERATION" for more information.

## RAID MODES

A Redundant Array of Independent (or Inexpensive) Disks (RAID) is a system that utilizes multiple hard drive/SSDs to share or replicate data among the hard drive/SSDs. The benefit, depending on the selected RAID Mode (combinations of disks), is one or more of increased data integrity, fault-tolerance, throughput or capacity as a single drive when compared to individual hard drive/SSDs.

 Any RAID mode changes or deletions will erase all the existing data inside the hard drive/SSD. It is highly recommended to save all existing data to another hard drive/SSD before performing any RAID mode changes or deletions.


 Using identical hard drive/SSDs with the same capacity and RPM, and from the same manufacturer are highly recommended for best performances.


### ***JBOD (None RAID)***

Just a Bunch of Disks (JBOD) refers to a group of hard drive/SSDs. In JBOD, the number of logical hard drive/SSDs is equal to the number of physical hard drive/SSDs. This mode allows the RAID System to operate as a multi-disk storage enclosure, but provides no data redundancy. The speed of operation is fast in comparison to other RAID modes.

## ***RAID 0 (Striping)***


RAID 0 (Striping) is a performance-oriented, non-redundant data mapping technique. It combines multiple hard drive/SSDs into a single logical System, (displays as only one large drive) and splits data evenly across two hard drive/SSDs simultaneously, dramatically increasing performance. Striping can be implemented in hard drive/SSDs of differing sizes, but the capacity is limited to the size of the smallest hard drive/SSD. Although Striping can be easily configured, Striping should never be used for mission critical applications. The speed of operation is fast in comparison to other RAID modes.

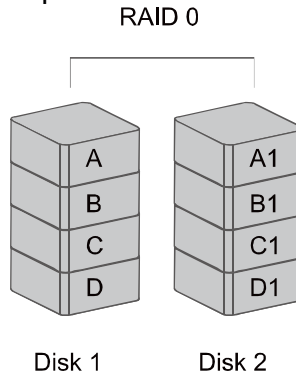


 In Striping mode, if one hard drive/SSD in the RAID System fails, all data in both installed hard drive/SSDs will be lost.

## ***RAID 1 (Mirroring)***

RAID 1 (Mirroring) consists of at least two (2) hard drive/SSDs storing duplicate copies of the same data. In this mode, the data is simultaneously written to two (2) hard drive/SSDs. Thus, the storage capacity of a two-disk array is combined into a single disk and the capacity is limited to the size of the smallest hard drive/SSD. The speed of operation is average in comparison to other RAID modes.

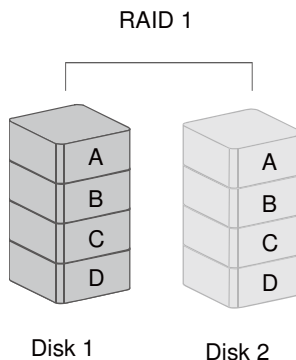

 In Mirroring mode, if one of the hard drive/SSDs fails, specifically the “Source” Disk, the data is still available. However, if the Source Disk fails during the Rebuild process, the data in both hard drive/SSDs will be lost. It is NOT recommended to do **hot swap** for the Source Disk during the Rebuild process because it may cause the Rebuild process to fail and the data in both hard drive/SSDs will be lost.


## ***HYPERDUO (Capacity and Safe)***

The HyperDuo feature allows only one (1) hard drive, and can support one (1) additional solid-state drive. It has two RAID modes: Capacity Mode and Safe Mode.

📅 The HyperDuo feature is specially-designed for users who has additional SSDs in storage, but not being used. Hence, this will provide those users an option to further utilize their un-used SSDs.


The Capacity Mode provides maximum capacity available by combining both the SSD and hard drive, while performing at SSD speeds, unless the SSD is full. Under Capacity Mode, data is striped into the SSD. Then, if the SSD is full, additional data is stored via Span into the hard drive and performance speeds are decreased. The total volume available is based on the SSD and hard drive combined. If either the hard drive or SSD becomes defective, all data will be lost.

HyperDuo Capacity

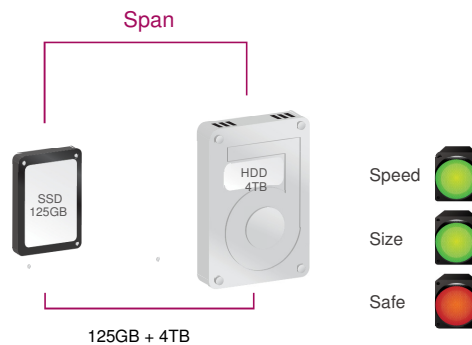

The Safe Mode provides optimal data protection without affecting data read speeds, but data write speeds are decreased for maximum resiliency. Under Safe Mode, data is striped into the SSD, and at the same time, the same data is mirrored into the hard drive. Then, if the SSD is full, additional data is stored via Span into the hard drive. The total volume available is based on the hard drive alone. If the SSD becomes defective but the hard drive is still functional, the original and identical backed up data is available offhand. However, if the hard drive becomes defective, all data will be lost.

HyperDuo Safe

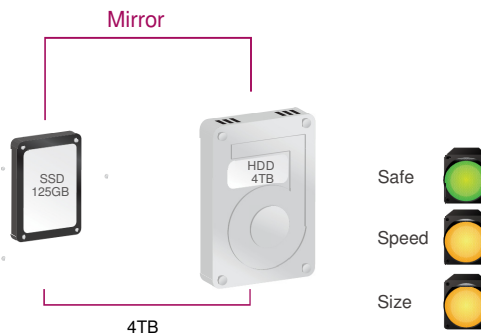

📅 the Rebuild is not available for HyperDuo Safe mode.

## **APPENDIX: SPECIFICATIONS**

<b>Model Name</b>	<b>RS-M2T</b>
<b>Connector</b>	Thunderbolt™ ports x 2
<b>Disk Support</b>	3.5" & 2.5" SATA hard drive 2.5" SSD* *Identical hard disk recommended – same manufacturer, capacity and RPM
<b>RAID Mode</b>	JBOD (None RAID), RAID 0 (Striping), RAID 1 (Mirroring), HyperDuo (Capacity/Safe), and Rebuild
<b>Data Transfer Speed</b>	Up to 10Gbit/sec
<b>System Material</b>	Aluminum case with plastic parts
<b>LED Indicators</b>	Power / Connection / Health / Access / Fan Error *The LED Indicators can only display all status/alerts if the RAID MASTER is kept ON at all times.
<b>Power Supply</b>	Input: AC 100-240V Output: DC +12V/5A
<b>FAN</b>	High Performance Fan x 1
<b>Dimension</b>	126 (L) x 138 (W) x 213 (H) mm 5.0 (L) x 5.4 (W) x 8.4 (H) inches
<b>Weight (without Disk)</b>	1.62 kgs, 3.57 pounds (lbs)
<b>Certification</b>	CE, FCC, Thunderbolt™